



XRF Core Scanner User Manuals

- XRF Core Scanner User Manual
- XRF Core Scanner Program, Getting Started
- XRF Core Scan Program, Default Values
- Winaxil Batch, Getting Started

XRF Core Scanner Installation Manuals

- External Connections XRF Core Scanner
- Canberra Connections XRF Core Scanner
- Canberra X - PIPS / DSA 1000
Installation and Configuration

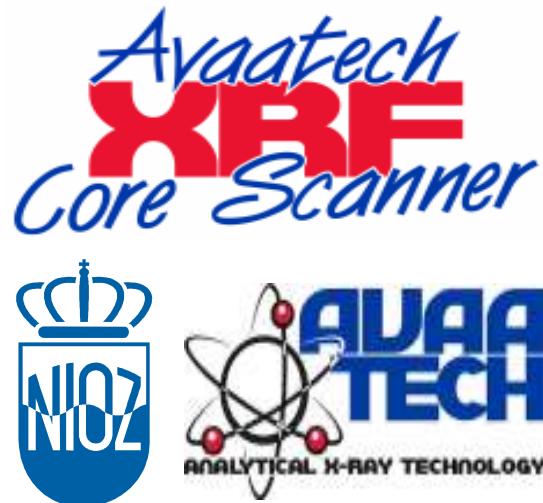


Table of contents

Section	Title	Page
<u>1</u>	<u>General information</u>	3
1.1	Description of the XRF core scanner	3
1.2	Overview of the main components	4
<u>2</u>	<u>Installation</u>	5
2.1	Requirements	5
<u>3</u>	<u>Operation</u>	6
3.1	Warning	6
3.2	Functional description	6
3.3	Sample preparation	11
3.4	Data acquisition	11
3.5	Data processing	12
<u>4</u>	<u>Appendices</u>	13
4.1	Specifications	13
4.2	Trouble shooting	15
4.3	Material information sheet for Beryllium	16
4.4	Radiation safety data sheet	17

WARNING

The X-rays generated in the source are dangerous and may be fatal if encountered. Extreme caution must be exercised when working with this equipment. Radiation dosimeters must be worn by anyone working with or observing the operation of this equipment.

Purchasers planning to install a radiation machine should ensure they are in compliance with local, state and federal regulations.



See appendix 4.4 for a radiation safety data sheet.

1. General information

1.1 Description of the XRF core scanner

The XRF (X-Ray Fluorescence) Core Scanner is originally designed for rapid and non-destructive determination of the chemical composition of marine bottom sediments onboard ships and at laboratories ashore. Marine bottom sediments are often sampled by means of box-cores, gravity-cores and piston-cores, and collected in plastic tubes which are subsequently split in length.

The XRF measurements are carried out on split cores.

As an example, the XRF core scanner is able to perform a complete scan of a one meter long core with a sample resolution of 1 cm within 30 minutes or faster.

This gives the possibility to take a new core in the same area if the chemical data show that the core does not contain the expected information or that errors were made with coring.

The core scanner is equipped with a motor actuated door that gives access to the core fit system. The core fit system can fit a split core by mechanical system. The XRF analysis method requires an X-ray source and detector to be positioned accurately above the sediment surface. Therefore a computer controlled positioning system positions the core and the instruments accurately even if the core is not cut very homogeneously.

Instead of a split sediment core other sample holders can be fitted and measured in the scanner. For example samples on a microscope-glass can be measured without problems. The demand for proper XRF analysis is a horizontal surface.

The data acquisition of a core is carried out on a personal computer. Before a scan, all positions or areas of interest are entered. The scanning of a core is computer controlled. If the scanner cannot find a sediment surface it will continue with the next position.

Post-processing of the data is carried out on the same computer.

1.2 Overview of the main components

The XRF core scanner consists of five main parts:

- 1) Core scanner with DC motor actuated X- and Z-axis, stainless steel bearings for Z-axis, stainless steel X-ray safe enclosure with X-ray safe window for visual inspection, electric motor driven door and mechanical core fitting.
- 2) Intelligent scanner electronics with precise positioning capabilities, integrated safety interlock mechanism, programmable logic control with touch screen for fault-finding and manual control functionality.
- 3) Forced air-cooled Oxford 100 Watt X-ray source with Rhodium anode and a voltage range of 4...50 kV and current range of 0...2 mA.
- 4) Canberra X - Pips 1500-1.5 Detector: 8 mm² collimated to 5 mm², crystal thickness 1.5 mm Be-window: 0.5 mil (soldered, coated) Canberra DSA 1000 (MCA)
- 5) Personal computer running under Windows XP with fully automated data acquisition and processing software.

Note: **Both the X-ray source and the X-ray detector contain Beryllium windows as an X-ray transparent separation between vacuum and atmospheric conditions. Beryllium is a toxic material!**

2. Installation

2.1 Requirements

Electricity:

The XRF core scanner needs one electrical connection to a 230 V / 50 - 60Hz mains net. The connection should be fused with 16 Ampere. See appendix **4.1** for the electrical specifications.

Helium gas:

Helium gas is necessary during XRF-measurements. It has a much lower X-ray absorption then air. The helium pressure at should be adjusted with a pressure regulator at 0.5...1 bar. The required helium flow during XRF-measurements is approximately 10...30 ml/min at environmental pressure. The estimated live time of a 200 bar / 50 l bottles is around 200 days.



3. Operation

3.1 Warning


The X-rays generated in the source are dangerous and may be fatal if encountered. Extreme caution must be exercised when working with this equipment. Radiation dosimeters must be worn by anyone working with or observing the operation of this equipment.

Purchasers planning to install a radiation machine should ensure they are in compliance with local, state and federal regulations.

See appendix 4.4 for a radiation safety data sheet.


3.2 Functional description

Before switching on the core scanner the compressed air from an external air source, e.g. a compressor should be connected. The helium gas bottle must be opened.

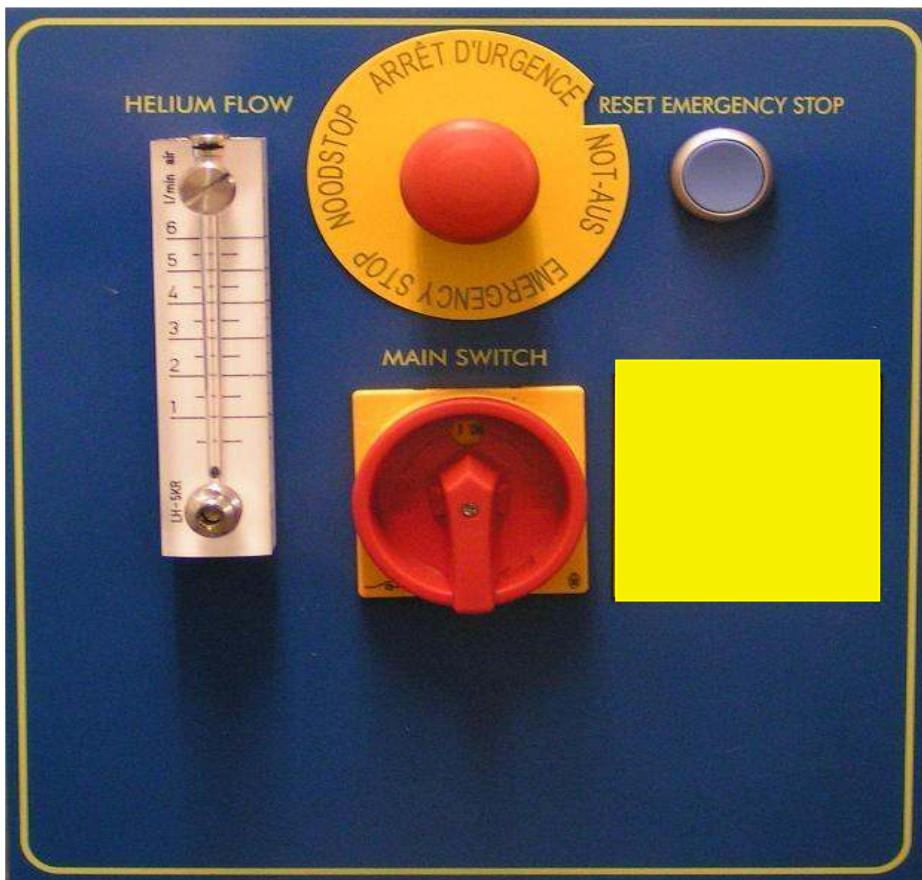

The MAIN SWITCH mounted on the left side of the XRF Core-Scanner must be switched to position "ON". Always push the button RESET EMERGENCY STOP after activating the main switch; otherwise the system will remain in an emergency stop status.

Approximately 30 seconds after activating the main switch an Avaatech logo will appear on the touch screen. By touching the screen the MAIN MENU page will show up.

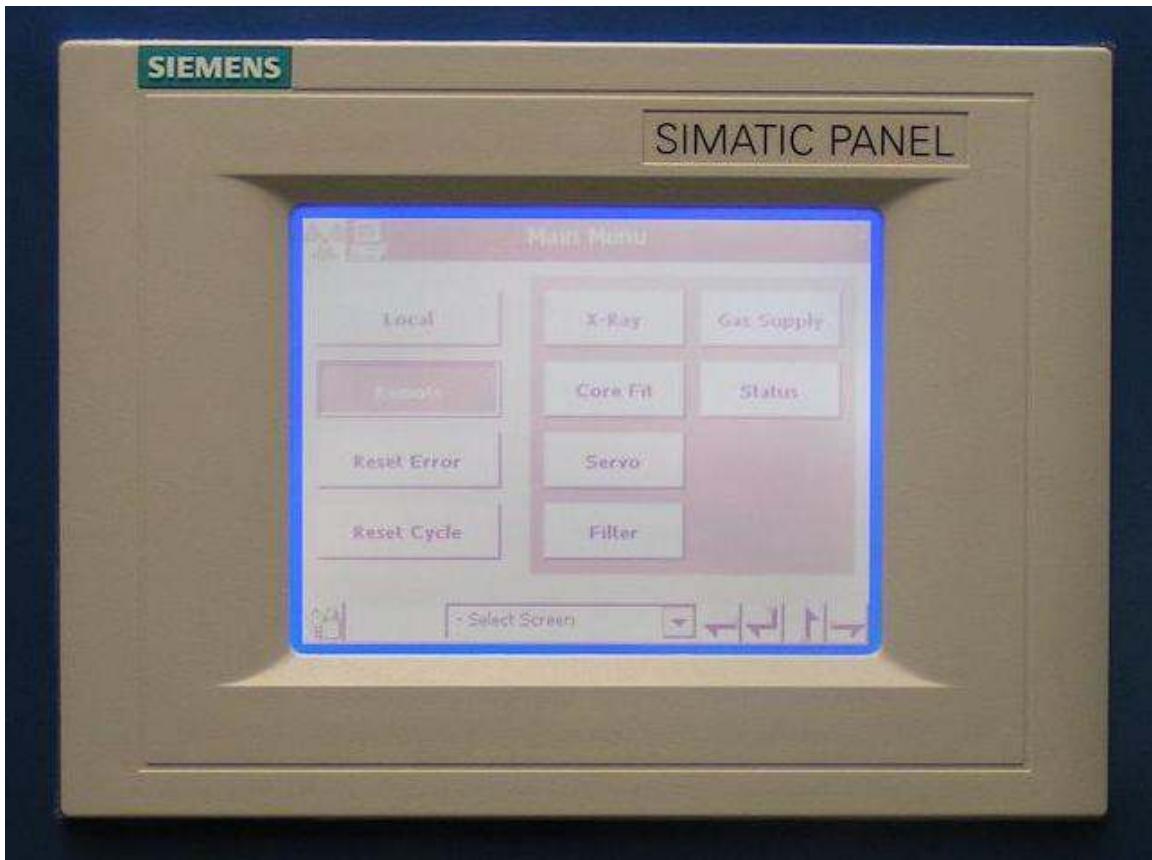

To operate the scanner from the Personal Computer the scanner should be set in the 'REMOTE' mode.

For scanner service and fault finding the scanner can be set to 'LOCAL' control.

From this moment on various push buttons are functioning:

- X-Ray On button
- X-Ray Off button
- Helium button
- Light button
- Camera Light Button
- Door Open button
- Door Close button
- Emergency button


Only when the safety-interlock circuit is activated it is possible to produce X-rays.
The door can only be opened when the X-rays are switched off.

The interlock lamp (green) is lit when the safety-interlock circuit is activated. This indicates that all doors are closed and locked.

- Set key switch **LOCK** to ON, the standby lamp (white) is lit
- Push the black **X-RAY ON** button to activate X-ray tube
- The **X-RAY ON** lamp (yellow) is lit, also the lamps on top of scanner is lit
- Push the red **X-RAY OFF** button to switch off the X-ray tube



- The **HELIUM** button opens a valve that enables a helium flow to the X-ray detection area. The flow meter must be adjusted to 10...30 ml/min. A mass flow meter measures the actual helium flow and causes a warning message on the data acquisition computer when the helium flow is below 5 ml/min.

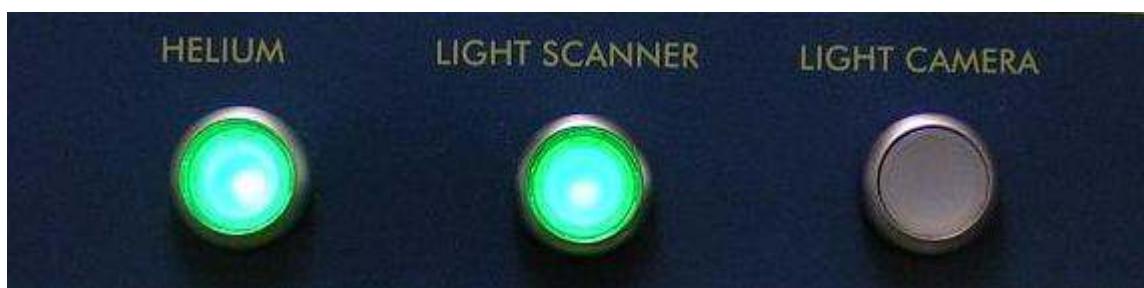

- The **LIGHT SCANNER** button activates the spot lights inside the scanner.
- The **LIGHT CAMERA** activates the linear light source of the camera system.
- The **DOOR OPEN** button opens and the **DOOR CLOSE** button closes the door that gives access to the core fit section of the scanner. When the cover closes care must be taken for hands and fingers. For safety reasons the cover is locked when in closed position.
The door can only be opened when the X-rays are switched off.

Warning:

If the air-cooled X-ray tube was operated at maximum power it is recommended to keep the door closed for 5 minutes after switching off the X-rays. This enables the X-ray tube to cool down and avoid the activation of the thermal fuse of the tube.

See section 4.2, trouble shooting, for more details.



- Pressing the **EMERGENCY STOP** button immediately stops any scanner or door movement and switches off the X-ray tube. To recover from an emergency stop pull the emergency stop button out and press the **RESET EMERGENCY STOP** button. To recover from an emergency stop also press the **RESET ERROR** and **RESET CYCLE** buttons at the touch screen. These buttons are available on the Main Menu screen.



3.3 Sample preparation

To prevent contamination of the helium flushed measurement triangle the surface of the sediment core is covered with a very thin Ultralene foil (appr.4 μ m thick).

X-ray fluorescence analysis gives chemical information of only the upper tens of micrometers of the sample. Therefore it is important to avoid any form of contamination.

When the Ultralene foil is applied, air-bubbles can be enclosed between the sample and foil. These air-bubbles must always be removed because they absorb X-rays and influence the data quality.

X-ray fluorescence analysis demands a flat and homogeneous surface. Sometimes it is necessary to carefully smoothen the sediment surface after the foil has been applied. This can be done using a roll of tape by rolling it gently from one side to the other. Always be careful not to contaminate the surface.

3.4 Data acquisition

Before the data acquisition can start two important settings must be chosen.

1) **count time** : how many seconds to measure at each position

The count time setting is a trade-off between data quality and scanning speed. Values between 10 s and 60 s are most common.

2) **X-ray excitation** : which kV, mA and filter settings are appropriate

In general for the best results of K-line analysis a combination with certain kV and mA values can be applied :

- a) no filter is used for Al up to Fe, at about 10 kV
- b) an Al filter for S up to Mn, 10 to 20 kV
- c) a thin Pd filter for Ti up to Ge, 10 to 25 kV
- d) a thick Pd filter for Fe up to Mo, 20 to 40 kV
- e) a Cu filter for Zr up to Ba, at about 30 to 50 kV

For heavier elements than Ba the L-lines are used for analysis.

For pragmatic reasons, such as lack of time, combinations of elements will be measured that will give reasonable results with one filter/kV combination. A few examples:

- 1) Al up to Fe can be measured without filter at 10 kV. Al up to Ti gives than good results. Mn and Fe, however, are counted somewhat less effectively. Sr cannot be measured at this kV.
- 2) If Mn and Fe are important they are most effective measured at 12 kV with the cellulose or the Al filter. Ti and lower elements will then be measured less effectively.
- 3) Mn and Fe can also be measured at 20 kV applying with the cellulose or Al filter. Sr will then be measured fairly.
- 4) Sr and Zr can be measured well at 30 kV using a thick Pd filter.
- 5) For Ba 50 kV and the maximum mA must be used in combination with the Cu filter.

Further, it is a matter of trial to find the optimum conditions for a combination of elements. In case these conditions can not be found in one filter/kV combination the samples must then be measured at two or more conditions.

The X-ray current setting depends on the average composition of the sample. To set the current to its optimal value it is important to understand the principle of 'dead-time'.

'Dead-time' considerations:

The X-rays emitted by the sample are detected and processed by the detector and its electronics. The processing speed of the electronics is limited. Therefore the amount of X-rays entering the detector is limited. Dead-time is a percentage that indicates the amount of time that is needed for processing. A


dead-time of 40% indicates that only 60% of the time X-rays actually are counted. To correct for this the time-base is delayed. A count time of 30 s with a dead-time of 40% will actually take 50 s. A higher current setting, meaning a higher X-ray intensity, gives a higher dead-time thus increased measuring times. A very low current setting gives a low dead-time but also poor data statistics. In practice it is recommended to adjust the current so that the dead-time percentage is **10...50%**. During the scanning of a sediment core it is not allowed to change the current setting anymore. It would disturb the linearity of the qualitative results.

Before starting a scan, the core name and length, the count time and step size must be entered. Also special areas with another step size can be entered.
During the scan a XRF spectra is stored for each measurement.

See **Getting started manual for XRF Core Scanner Program** for more details.

3) Slit size

The irradiated length of the sample can be adjusted with a motor-controlled slit system. The slit size setting should be set using the touch-screen on the XRF-Scanner. From the main Menu press the Slit button. On the Slit screen the desired slit-size can be entered in the Destination field. Press the GoTo button to adjust the slit. The final slit opening can be read from the Position field. The arrow buttons can be used to modify the Destination value.

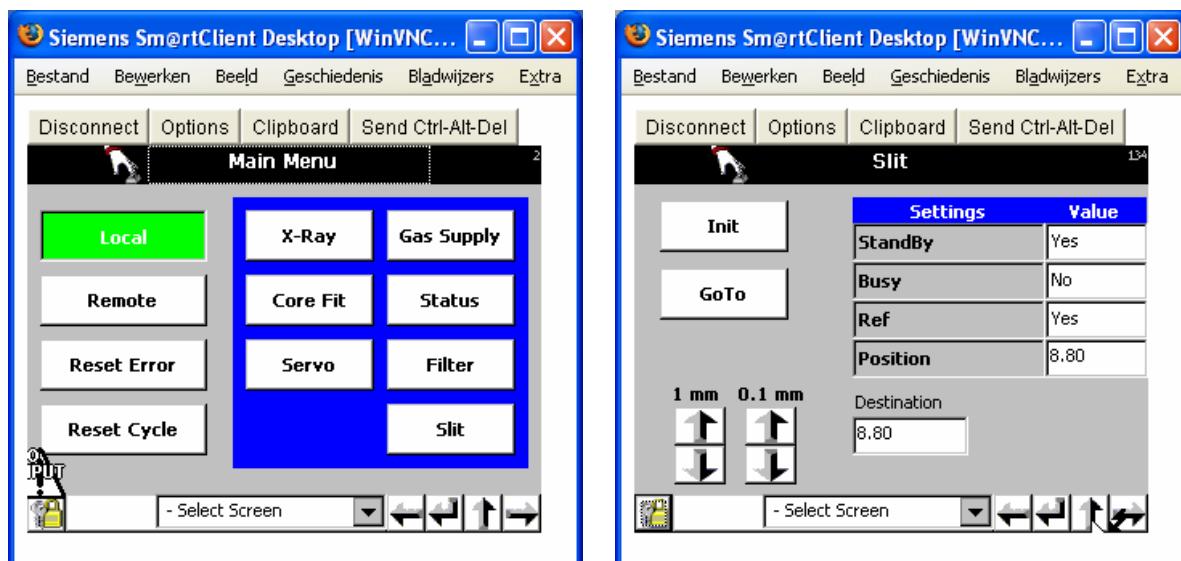

Irradiated sample length: 0.1...10 mm

See main menu Touch Screen SLIT

By the small steps (from 1 mm – 0.1 mm)

GoTo **2 mm** and than Goto with **0.1 mm** steps to your adjustment

- | | |
|---|-------------|
| Push left arrow button (above) steps + 1 mm | GoTo |
| Push left arrow button (under) steps – 1 mm | GoTo |
| Push right arrow (above) steps + 0.1 mm | GoTo |
| Push right arrow (under) steps – 1 mm | GoTo |

Irradiated sample width: 2 - 15 mm

Huberslit

Turn Right = Close Turn left = Open

One turn is turning the knob van 0 – 10

1 turn = 2 mm
2 turn = 4 mm
3 turn = 6 mm
4 turn = 8 mm
5 turn = 10 mm
6 turn = 12 mm
7 turn = 14 mm
7.5 turn is maximum =15 mm

3.5 Data processing

The stored XRF spectra need to be processed to obtain X-ray intensity data. Processing consists of subtracting a background curve, applying statistical corrections for physical processes in the detector and deconvolution of overlapping peaks. After that the peak integrals are calculated and stored.

See **Getting started manual for WinAxilBatch** for more details.

4. Appendices

4.1 Specifications

Mechanical:

Weight: 1225 kg
Dimensions: W = 340 cm, D = 80 cm H = 170 cm with door closed
H = 220 cm with door open

Electrical:

Input voltage: 230 V AC Input frequency: 50 / 60 Hz

XRF Core-Scanner/computer and electronics: 2500 W

Gasses:

Pressure: Helium (type: 4.6) bottle 50 l/200 bar: 0.5...1 bar

X-ray generation:

Voltage range: 4 ... 50 kV
Current range: 0 ... 2 mA
Anode type: Rhodium
Tube-sample filters: Al – Pd Thin - Pd Thick - Cu

Irradiated sample length: 0.1...10 mm

Irradiated sample width: 2 - 15 mm

X-ray detection:

Multi Channel Analyzer: 2048 channels @ 20 eV/Ch
FWHM @ 5.9keV better than: 190 eV

X-ray shielding and safety:

Shielding materials :

Stainless steel, 8 mm thick in direct beam area, 3 mm thick for indirect excitation shielding.
Lead / PMMA alloy window, 25 mm thick

Safety mechanism:

Automatic safety interlock circuit with a 'first switch off X-rays, then open door' philosophy. The door can only be opened after switching off the X-rays manually. Door is locked when X-rays are switched on.

The X-rays can only be switched on manually after an automatic check of all safety switches and status of the cover and service door locks.

The X-rays ON warning lights (near X-Ray ON switch, on top of scanner) are "FAIL SAVE". If a light bulb is broken, the X-rays can not be switched on.

Sample dimensions:

Allowable core length: 30 ... 160 cm

Allowable core width: 50 ... 130 mm

Scanner positioning:

X-direction:

Range: 0 ... 160 cm
Accuracy: +/- 0.003 mm

Z-direction:

Repeatability: 0.05 mm or better

XRF analysis:

Detection limits of some elements:

Measured at 10kV, no filter and at 30 sec. count time:

Detection limits Avaatech XRF Core – Scanner

The estimated detection limits for 20 sec.counting time for a typical muddy sediment sample is:

Al...0.2%	Si...0..1%	P...0.05%	S....0.05%
K....0.04%	Ca..0.02%	Ti..0.05%	Mn..100 ppm
Fe..45 ppm	Sr...5 ppm	Zr..20 ppm	Ba....40 ppm

Measured at 50 kV, 1 mA, Cu filter and 30 sec. Count time, 1500 μ m detector:

Ba 200 ppm. (At 100 sec. count time this is somewhat lower)

4.2 Trouble shooting

- Problem: The X-rays can not be switched on.
Action: The safety interlock circuit detects an unsafe situation. Check that the cover and service doors are closed and locked. If the cover is closed, push down the cover into its lock. Check safety switches of the cover and service doors. Check emergency button. Check both X-rays ON light bulbs on top of scanner and miniature light bulb on front panel.
- Problem: The X-rays can not be switched on.
Action: The X-ray tube can be over-heated when used for a longer period on maximum power. There is a thermal fuse on the outside of the X-ray tube. Press the red button of the thermal fuse when the tube has cooled down.
Press RESET ERROR and RESET CYCLE on Main Menu of touch screen
- Problem: The cover will not open.
Action: The X-rays are switched on. Check if emergency button is not activated.
- Problem: Emergency button has been activated.
Action: To recover from an emergency stop pull the emergency stop button out and press the RESET EMERGENCY STOP button.
Press RESET ERROR and RESET CYCLE on Main Menu of touch screen
- Problem: X-ray detector has been pushed upwards.
Action: This generates an emergency stop situation. If the cause of the detector movement is a serious crash of the detection triangle please contact AvaaTech immediately. If the detector moved by accident recover from the emergency stop situation as described above.
- Problem: Fault message 'X/Z Axis error' on display.
Action: The X/Z-table did not reach the target position. Check for mechanical obstructions. The scan must be restarted.
- Problem: No Helium bubbles in water bottle.
Action: Open the Helium bottle.
- Problem: No Helium bubbles in water bottle, there is maybe a leak in foils of the prism
Action: Remove the prism, and put new foil on the prism

4.3 Material information sheet for Beryllium

4.4 Radiation safety data sheet

Getting Started manual ¹ for XRF Core Scanner Program ²

Version 3.0 August 2007 Bob Koster

Contents:

- Part 1: Introduction to the XRF Core Scanner Software
- Part 2: Launch Program
 - Startup Window
- Part 3: User Interface
 - Scanner Menu
 - View Menu
 - Setup Menu
 - Help Menu
 - Application Toolbar Buttons
 - Spectrum Toolbar Buttons
 - Statusbar
- Part 4: Instrument Settings and Measurement Setup Description
- Part 5: Spectrum Processing
 - Spectrum File Format
 - Using Canberra's WinAxil for Processing
- Part 6: How Do I ...
 - Connect to Scanner
 - Start a Step Scan
 - Start a Calibration Scan
 - Start a Stability Scan
 - Reset a scanner error on the touch screen



¹ Contents of this manual is based on the Windows help files supplied with the XRF Core Scanner Software

² XRF Core Scanner was developed by the Royal Netherlands Institute for Sea Research and exclusively distributed and supported by AvaaTech Analytical X-Ray Technology

Part 1

Introduction to the XRF Core Scanner Software

Introduction:

The XRF Core Scanner Program is a multi-threaded application that runs on a personal computer with a WIN32 based operating system, like WinXP and Win2000, and connects to the XRF Core Scanner and to all of its scientific instruments.

The program controls all the instrument settings via the [Instrument Settings](#) window and can perform a XRF scan on a split sediment core. A core position description, the X-Ray excitation and measurement parameters are to be defined in the [Measurement Setup](#) window.

If a split sediment core has been put in the XRF Core Scanner the user needs to perform two things over which the program has no control.

- 1) Push the Helium switch to flush the measurement chamber with helium.
- 2) Push X-Ray ON switch to start the X-Ray tube.

From here the program can perform a fully automated scan over the core and store the measured XRF spectra in the chosen data directory.


At a later stage the acquired and saved spectra are to be processed with a separate [processing](#) package.

Part 2

Launch Program

Launch Program:

The main screen looks like this:

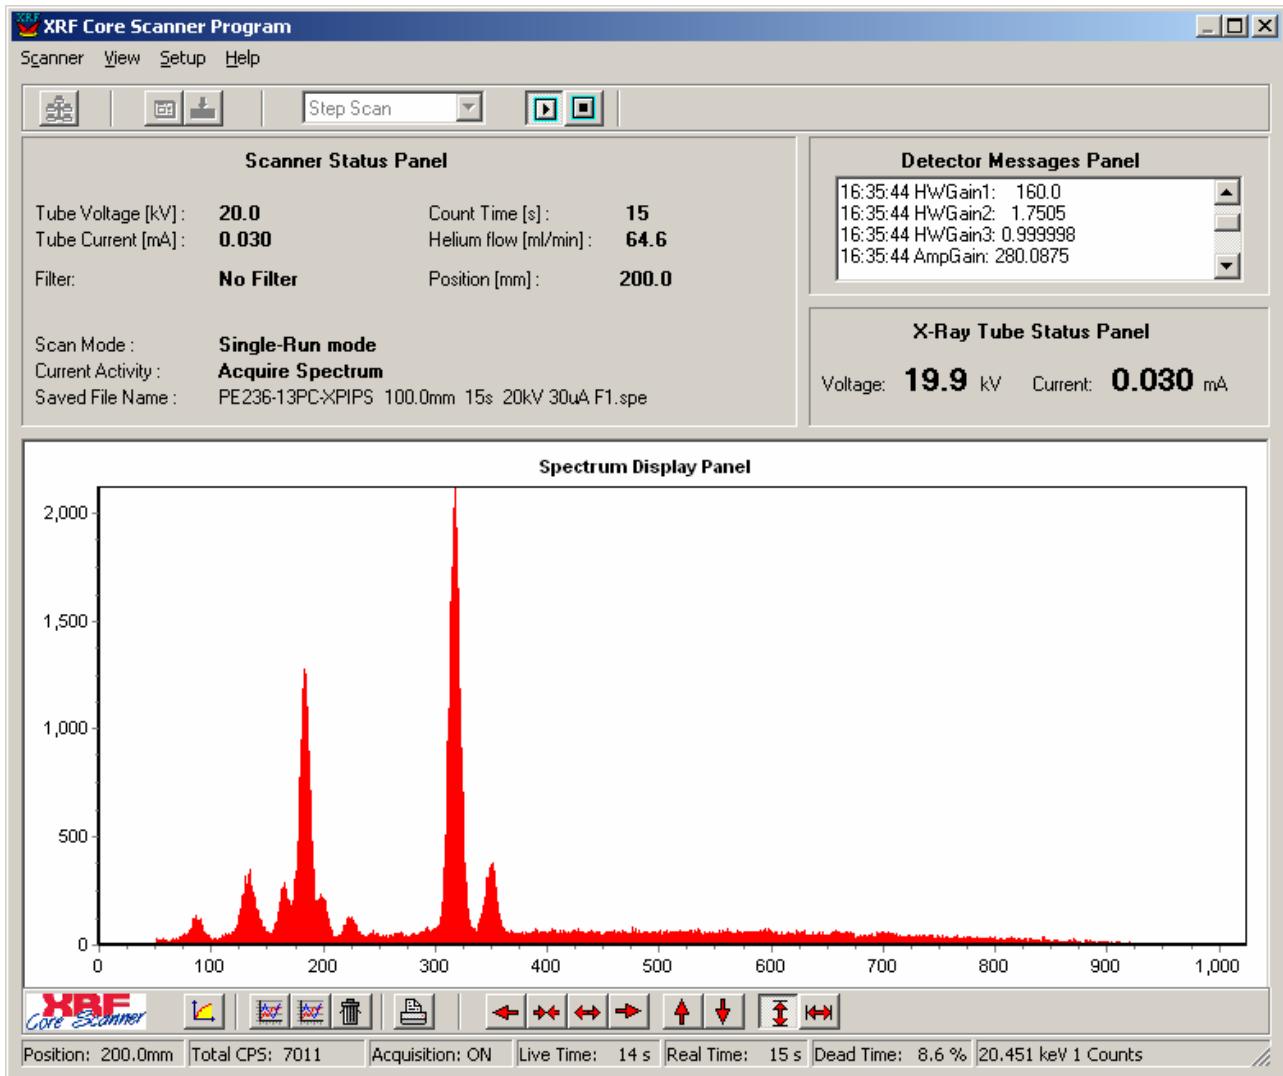

At the top of the screen there is the main menu. Almost all the selectable items from the main menu are also accessible via the [Application Toolbar](#) buttons below it.

In the upper-left corner there is a **Scanner Status Panel** that shows various parameters as a scan proceeds. In the upper-right corner there is a **Messages Panel** that shows the various communication commands between computer, detector and scanner. This panel can be useful to locate the sources of possible errors.

Below there is an **X-Ray Tube Status Panel** that shows the actual X-Ray tube status. These values are only updated if the program is connected to the scanner.

The largest panel is the **Spectrum Display Panel**. The live acquired spectrum is always displayed in red. At any given moment an older spectrum can be read from disk and displayed as an overlay in the Spectrum Display Panel. The appearance of the spectra in the Spectrum Panel can be manipulated with the buttons from the [Spectrum Toolbar](#).

At the bottom of the screen there is a [Statusbar](#) that shows spectrum related parameters as the scan proceeds.

Part 3

User Interface

Scanner Menu:

The Scanner Menu contains two items :

- | | |
|----------|--|
| Connect | Connects program to scanner and its instruments |
| Hardware | Control Direct control of scanner, X-Ray tube and detector |
| Exit | Terminates the program |

View Menu:

The View Menu contains three items :

- | | |
|-------------------|---|
| Scanner Messages | Shows the logged messages from the scanner |
| Detector Messages | Shows the logged messages from the X-ray detector |
| None | |

Setup Menu:

The Setup Menu contains two items :


- | | |
|---------------------|--|
| Instrument Settings | Contains settings related to scanner |
| Measurement Setup | Contains settings related to the measurement |

See part 6 for detailed description of setup screens.


Help Menu:

The Help Menu contains two items :

- | | |
|---------------|---|
| Help Contents | Start the Win Help program with the contents tab selected |
| About | Shows an about box with company information |

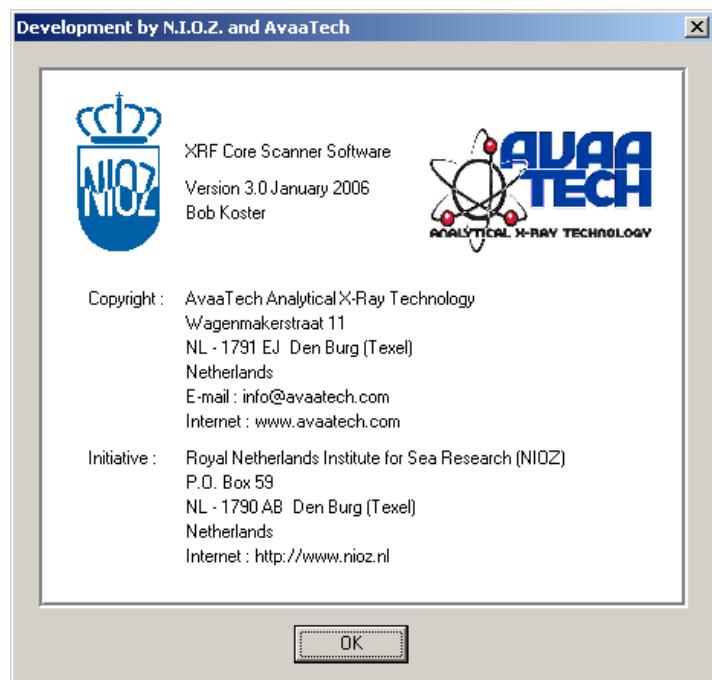

Application Toolbar:

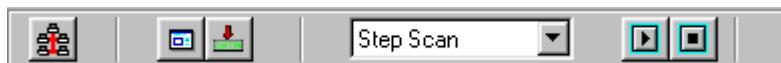

- Connection button
- Instrument Settings button
- Measurement Setup button
- Scan Mode selector
- Start Scan button
- Stop Scan button

Spectrum Toolbar:



- Select Linear or Logarithmic vertical scale
- Display a stored spectra with different colors
- Remove overlaid spectra from screen only
- Make a hard copy of the Spectrum Display Panel
- Move, Shrink and Expand spectrum horizontally
- Expand and Shrink spectrum vertically
- Auto-Scale spectrum vertically and horizontally

Status bar:




- Position:** Current X-position of the scanner in [mm]
Total CPS: Total count per second counted by the multi channel analyzer
Acquisition: Status of Multi-Channel Analyzer [On/Off]
Live Time: Elapsed Live time of current measurement in [s]
Real Time : Elapsed Real time of current measurement in [s]
Dead Time: Percentage of Dead time in detection circuit in [%]
Energy Intensity(*): Cursor values in [keV] and [Counts]

(*) See also Energy Calibration parameters on Instrument Settings window

Part 4

**Instrument Settings
&
Measurement Setup
&
Window description**

Instrument Settings/Excitation:

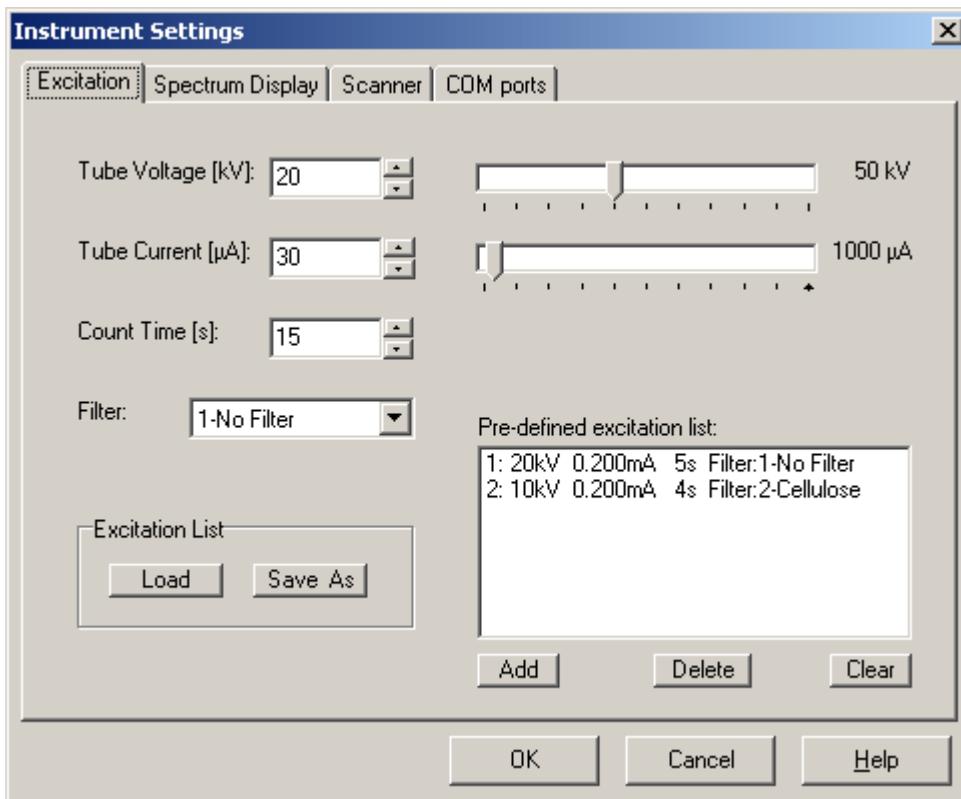


To set an X-Ray excitation condition adjust the **kV** and **mA** sliders with the left mouse button pressed at the correct value. Select the appropriate **CountTime(*)** and **Filter** between X-Ray tube and sample. If the new excitation condition will often be used it could be added to the pre-defined excitation list. The contents of the pre-defined excitation list can be cleared with the corresponding buttons.

An excitation list can be saved to or loaded from disk.

This pre-defined excitation list appears in the Measurement Setup window. There one can make a choice which excitation condition is to be used for a step-scan. Even all excitation conditions from the pre-defined excitation list can be chosen. That will result in a multi-run step scan that measures a specific sample with various excitation conditions.

(*)**CountTime** is the time that the Multi-Channel Analyzer takes to acquire a spectrum. Since the MCA is programmed to measure in 'live-time' the actual time a measurement takes is calculated as [Count Time / (1- Dead Time/100%)], where Dead Time is a physical MCA phenomenon that is related to the total counts that enter the X-Ray detector. The Dead Time is displayed on the main screens statusbar. The Dead Time can be influenced by the X-Ray tube current.


Instrument Settings/Spectrum Display:

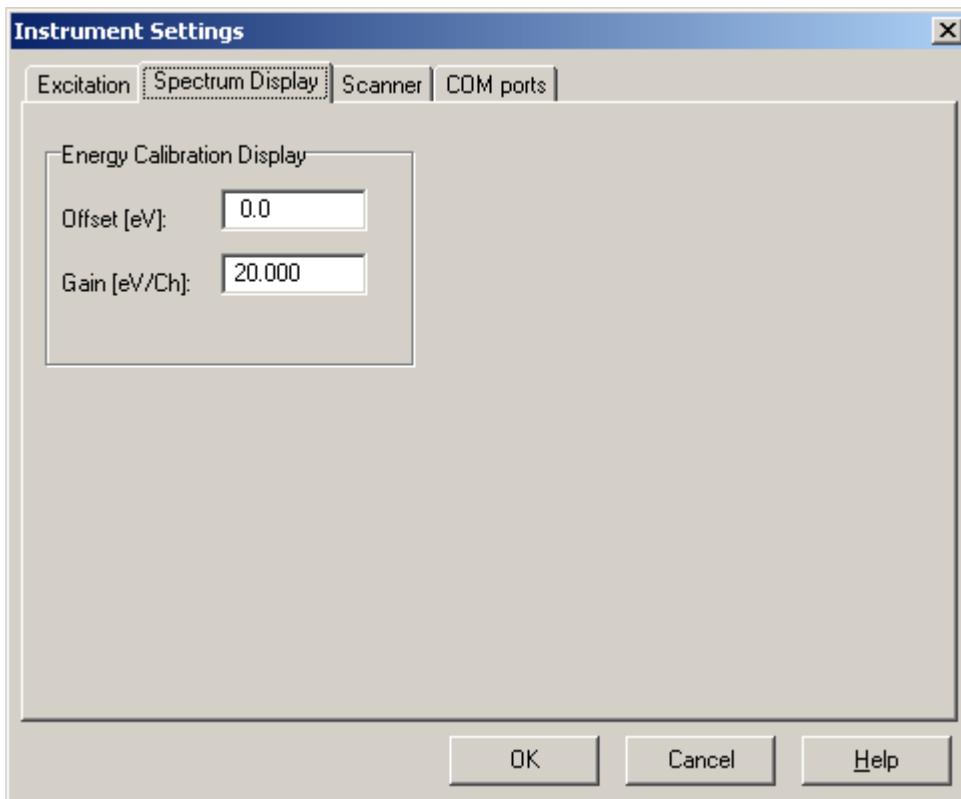

Both Energy Calibration settings **Offset** and **Gain** are implemented to transform the spectrum channel numbers, in the Spectrum Display Panel, into energy values. The settings on this screen are only to calculate the displayed energy value of the cursor in the Spectrum Display Panel. This energy value is displayed in the right corner of the statusbar.

The measured and stored raw-data spectra are not affected by this display energy calibration. Since the used spectrum post-processing package works with pre-defined processing models it is strongly advised to have the hardware detector gain always set to the same value. Recommended values are 20eV/Channel at 2048 channel spectra or 10eV/Channel at 4096 channel spectra.

Instrument Settings/Scanner:

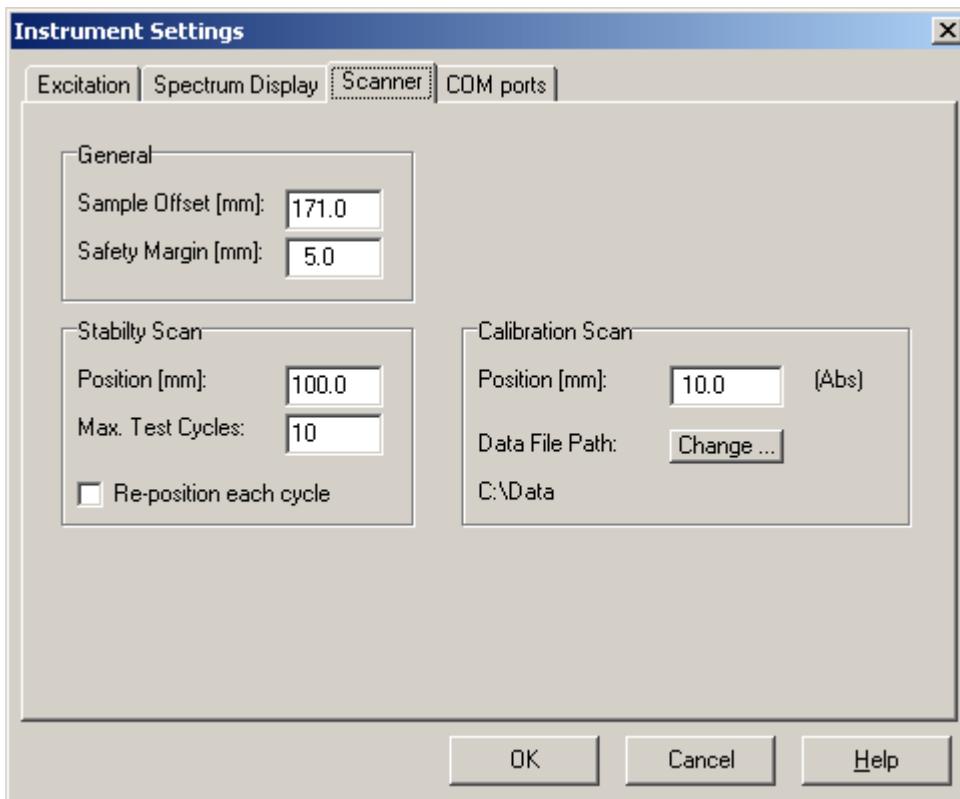

The General settings **Sample Offset** and **Safety Margin** are implemented to calibrate the scanners X-position and to prevent the scanner from measuring too close to the cores edges. The Sample Offset is the distance between the scanners homing-switch and the "0 cm" location of the core to be measured. Adjust this value if the mechanical "0 cm" position has been changed.


The Stability Scan settings **Position**, **Max.Test Cycles** and **Re-position** determine the behavior of a stability scan. A stability scan repeatedly measures the same position on a core to check the systems (and samples) stability. A stability scan ends automatically after the number of cycles set at Max.Test Cycles. If the Reposition checkbox is checked the scanner re-positions before a measurement. If not checked the scanner positions only once before the first measurement and then repeats the measurements without any mechanical movements. The spectrum file name automatically contains a cycle number. The excitation condition and data file directory are to be set in the Measurement Setup window.

The Calibration Scan settings **Position** and **Data File Path** determine the behavior of a calibration scan. A calibration scan is meant to monitor the systems long-term stability. At regular time intervals the user can measure a reference sample that usually is positioned at the left side of the scanners "0 cm" position. This position is entered as an absolute positive value in millimeters counted from the scanners homing-switch. The reference sample at such a location can be permanently available for monitoring.

The Data File Path is the directory where the spectra are stored and overrules the usual data directory path. This helps to collect all the long-term monitoring spectra at one central location. The spectrum file name automatically contains the time and date of the measurement.


The excitation condition is to be set in the Measurement Setup window and should always be the same !!!

Instrument Settings/Com Ports:

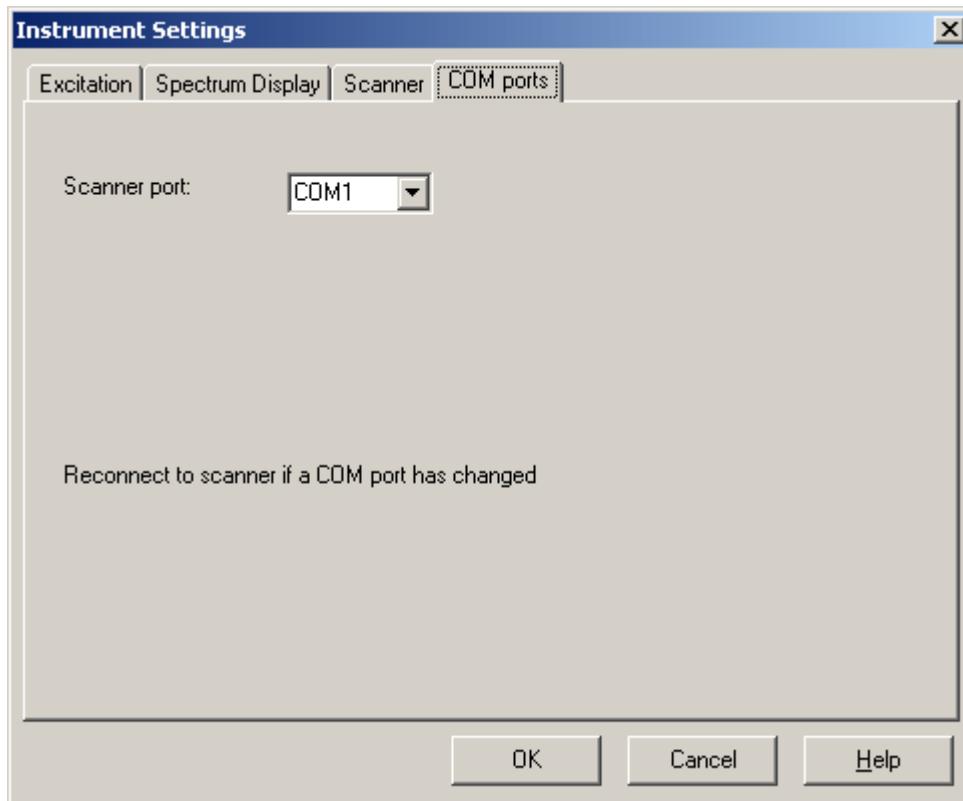

The scanner requires a serial COM port on the computer. The **Scanner port** setting determine which port number physically connects to the appropriate device. If a settings is changed the program should be re-connected to the scanner in order to activate the new settings.

Measurement Setup/Basic:

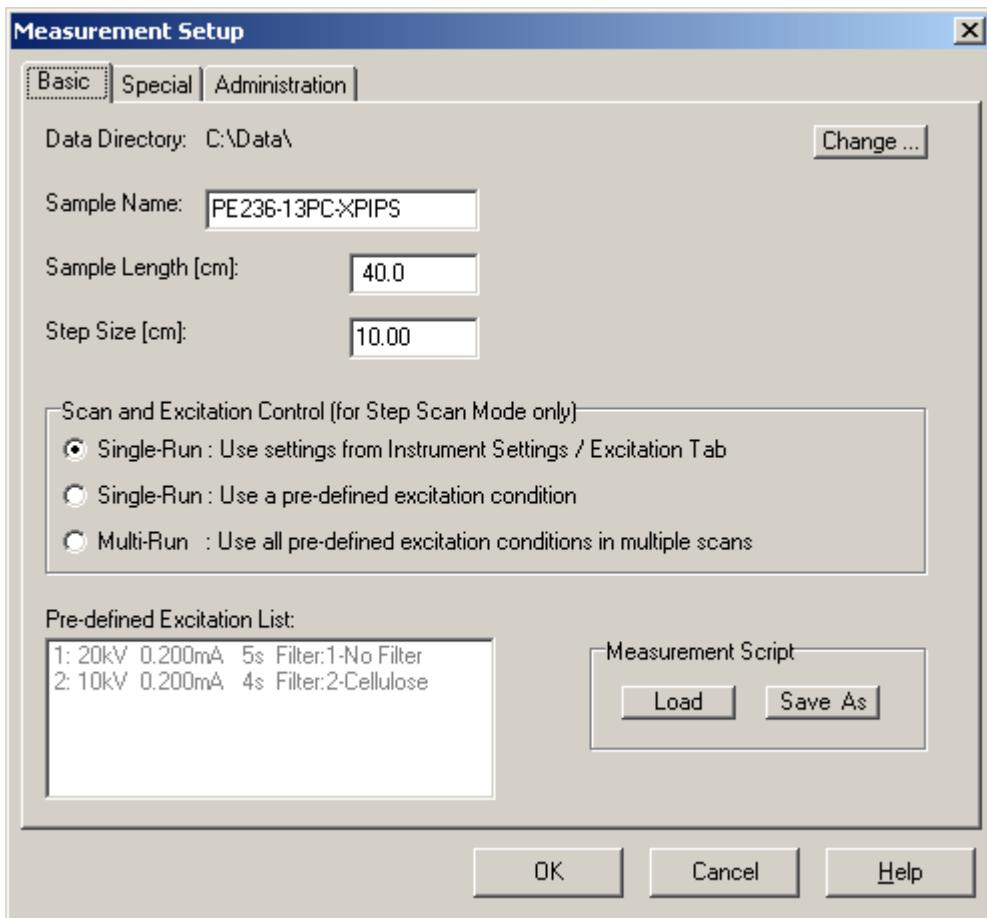

The **Data Directory** is the directory where the spectrum files, acquired during a scan, are saved in. By pressing the **Change ...** button an existing directory can be chosen or a new directory can be created.


Sample Name is the name of the core that is to be measured. Do **not** use any of the following characters since they could give problems in Windows file names: [. , / \ * ' " ;]

Sample Length is the exact length of the core. **Step Size** is the distance between each measurement during a step scan. A **[Special positions apply]** sign next to the Step Size parameter indicates that special positions apply for this scan. See Special tab topic for an explanation.

The **Excitation** condition to be applied can be chosen from the Instrument Settings / Excitation tab or from the pre-defined excitation list. Even all excitation conditions from the pre-defined excitation list can be chosen. That will result in a multi-run step scan that measures a specific sample with various excitation conditions.

For loading and saving **Measurement Scripts** see Special tab topic for an explanation.

Measurement Setup/Special:

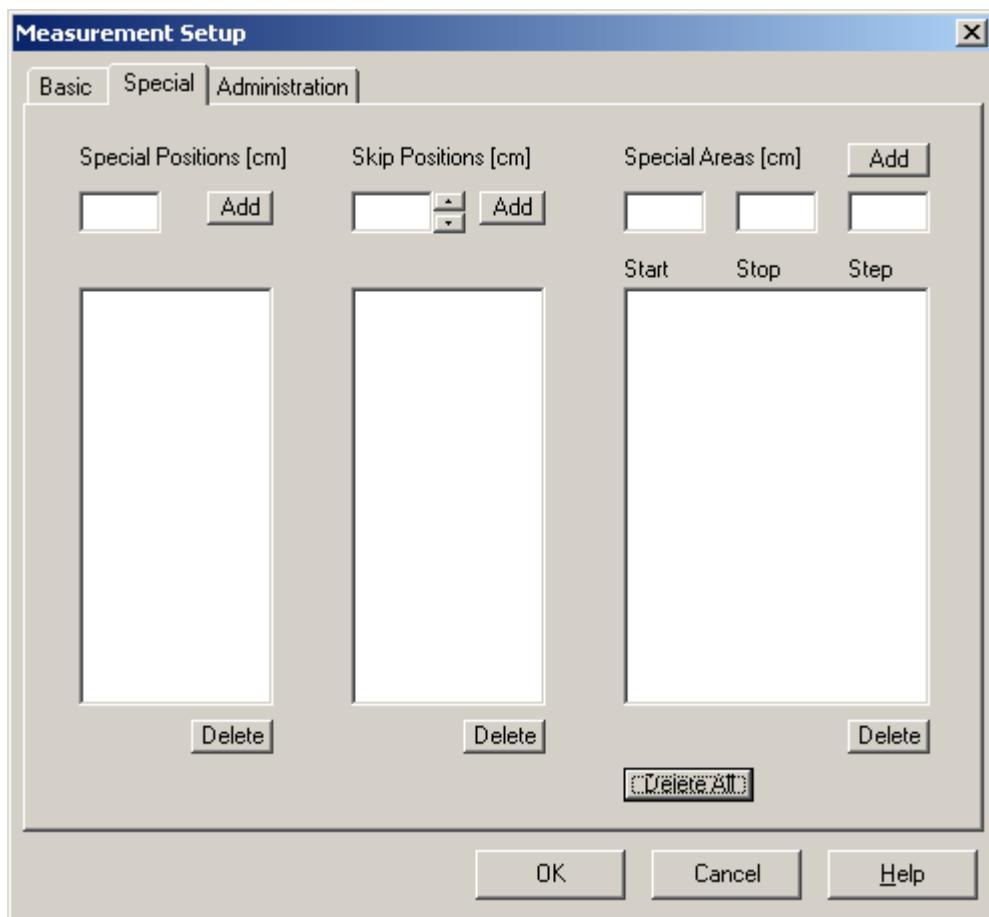

During a step scan the scanner jumps with Step Size steps over the core. To anticipate better on possible interesting core positions or huge gaps in the sediment surface it is possible to define **Special Positions** (e.g. in between a normal step), **Skip Positions** (a normal step that should be skipped) and **Special Areas** (a possible interesting area where one would like to step with a smaller step size).

The entries in each list are sorted ascendant.


To delete a single entry from any of the three lists: select the entry and click a **Delete** button. To delete the contents of all the lists press the **Delete All** button.

To avoid re-entering core parameters such like Special Positions, Skip Positions and Special Areas in case a particular core must be measured more then once **Measurement Scripts** are introduced. A measurement script can be saved or loaded from disk and contains the following parameters:

Sample Name / Sample Length / Step Size
Special Positions / Skip Positions / Special Areas

Parameters that are **not** included in a measurement script are:

Data Directory / Excitation condition

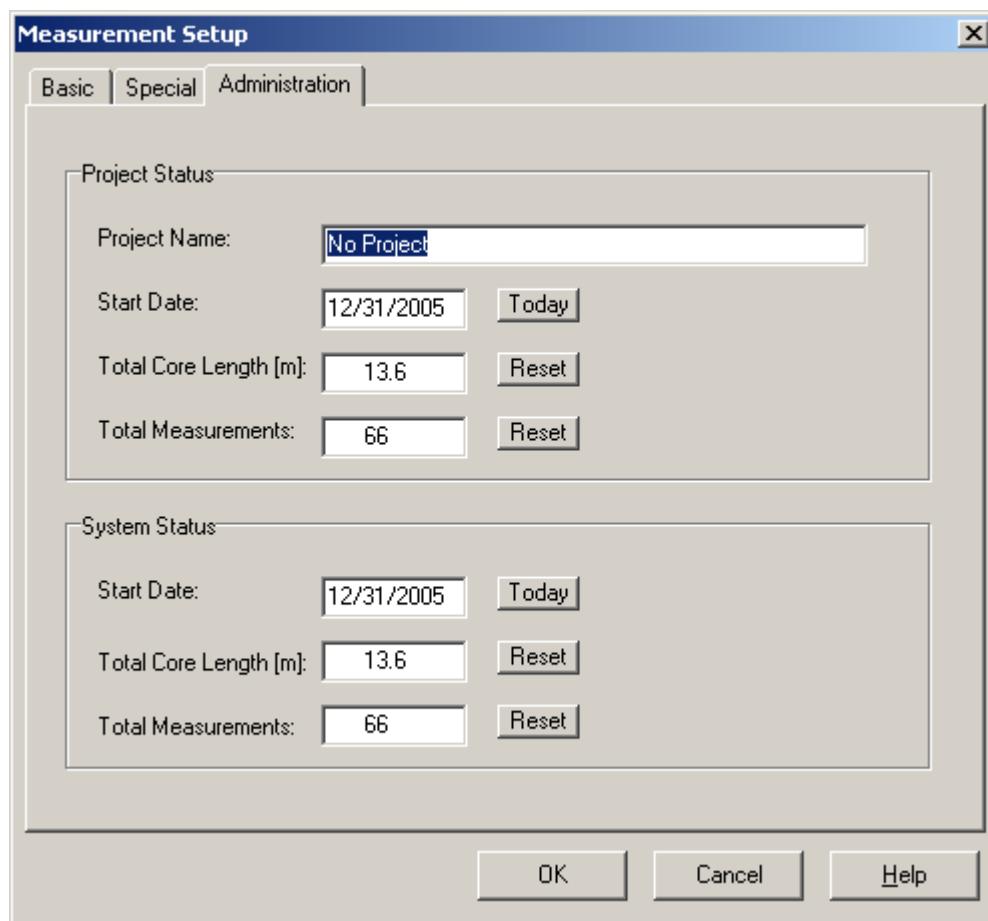Measurement Setup/Administration:

This program keeps track of the number of measurements done and the length of the samples that have been scanned.

The counters can be reset to zero for a specific project. Another pair of counters can be used to register the systems total usage.

Part 5

Spectrum Processing

Spectrum File Format:

The spectrum files are saved with a *.SPE file extension. SPE files are Block Structured Ascii (BSA) files that can be viewed or modified with any available text editor.

A BSA-file is divided into blocks. Each block is identified by a string that starts with a dollar sign (\$) and ends with a colon (:), thus, \$BLOCK_NAME:. The structure of the data in each block is uniquely defined; the order in which blocks appear in the file is, however, not defined.

NECESSARY BLOCK

\$DATA: **(spectral data)**
first_chan last_chan
chan_cont[first_chan] ...
...chan_cont[last_chan]

OPTIONAL BLOCKS

\$SPEC_ID: **(core position in [mm])**
spectrum_id

\$MEAS_TIM: **(spectrum measurement time in seconds)**
livetime trutime

\$DATE_MEA: **(start date of measurement)**
month day year hour min sec

Using WinAxil for Spectrum Processing:

Canberra's WinAxil can be used for spectrum processing. WinAxil is based on the international well known AXIL (Analysis of X-ray spectra by Iterative Least squares) fitting routines.

The WinAxil software package contains various components :

WinAxil	- Basic X-ray spectrum analysis with graphical interface
WinAxilBatch	- Program for unattended batch operation of WinAxil on multiple X-ray spectra and export facility to Microsoft Excel
WaxLibManager	- Program to organise the WinAxil parameter file in a database environment
WinFund	- Quantitative analysis program based on fundamental parameter method

In order to achieve good processing results it is important to set up a correct parameter database that contains all the relevant XRF parameters such as: tube type, detector type, filter materials, excitation settings and measurement atmospheres. This can be done with the **WaxLibManager** component.

Before **WinAxil** can start processing a measured spectrum file (*.SPE) it needs to know a lot of information about the measurement condition of the spectrum (e.g. X-ray tube type and settings, X-ray detector type, excitation filter, chamber atmosphere, tube-sample-detector geometry). Also a proper energy calibration is to be performed and proper peak- and continuum fit parameters are to be chosen. Finally the Region Of Interest and the elements of interest are to be specified.

If the fitting results for all the elements of interest are acceptable the processed spectrum can be saved as a *.WAX file. This file type includes the original spectrum, measurement- calibration- and fitting parameters and the fitting results. All these settings can also be saved as a *.AFM file. This file type is called a 'Model File'. Such a Model File can be used in WinAxil to accelerate the processing of other spectra that are measured under the same conditions.

WinAxilBatch is a batch processing program without a graphical interface that uses the same mathematical core as WinAxil. It is able to process large amounts of spectra that are measured under the same condition and can export the fitting results 'on the run' to Microsoft Excel. WinAxilBatch needs a Model File that contains all the proper measurement-, calibration- and fitting parameters.

WinFund is a program that can perform quantitative analysis of XRF spectra based on the fundamental parameter approach. It can work in three different modes: Standardless fundamental parameters mode, Standard-based fundamental parameter mode and Compare mode. This program is still in development and can only be used with extreme care.

Part 6


How Do I ...

How Do I ... Connect to Scanner

Before starting an actual scan be sure that the XRF Core Scanner is switched on and operates in Remote mode. Only when the program was just started it needs to be connected to the scanner and its instruments.

Press the  button to connect the program to the scanner and its instruments.

If the connection is established the   buttons become visible as a sign that a scan can be started. However before starting a scan the Instrument Settings and the Measurement Setup parameters should be properly set.

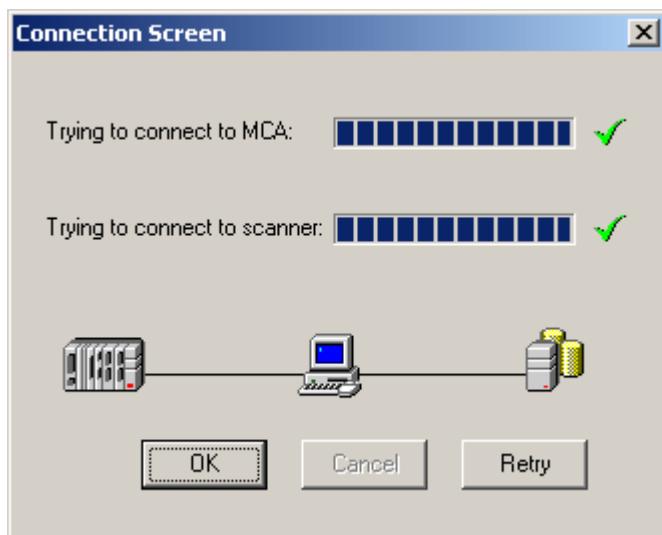

How Do I ... Start a Step Scan:

Make sure that the program is connected to the scanner.

Click the Measurement Setup button on the Application Toolbar.

Fill in **Data Directory**, **Sample Name**, **Sample Length**, **Step Size** and choose an appropriate X-Ray **excitation**.

Close the Measurement Setup window by pressing the Ok button.

Select the Step Scan mode with the Scan Mode selector.

Be sure that the Helium and X-Rays are switched 'ON' at the scanner.

Press the Start button to start scan.



How Do I ... Start a Calibration Scan:

A calibration scan is meant to monitor the systems long-term stability. At regular time intervals the user can measure a reference sample that usually is positioned at the left side of the scanners "0 cm" position.

The spectrum file name automatically contains the time and date of the measurement.

The excitation condition is to be set in the Measurement Setup window and should always be the same !!!

Make sure that the program is connected to the scanner.

Click the Measurement Setup button on the Application Toolbar.

Choose an appropriate X-Ray **excitation**.

The other parameters are ignored.

Close the Measurement Setup window by pressing the Ok button.

The **Data File Path** and measurement **Position** are taken from the Instrument Settings window Scanner-tab. Check if they still apply.

Select the Calibration Scan mode with the Scan Mode selector.

Be sure that the Helium and X-Rays are switched 'ON' at the scanner.

Press the Start button to start scan.



How Do I ... Start a Stability Scan:

A stability scan repeatedly measures at the same position on a core to check the systems (and samples) stability. A stability scan ends automatically after the number of cycles set at Max.Test Cycles. If the Reposition checkbox is checked the scanner re-positions before a measurement. The spectrum file name automatically contains a cycle number.

Make sure that the program is connected to the scanner.

Click the Measurement Setup button on the Application Toolbar.

Fill in **Data Directory**, **Sample Name** and choose an appropriate X-Ray **excitation**.

The other parameters are ignored.

Close the Measurement Setup window by pressing the Ok button.

The measurement **Position**, **Max.Test Cycles** and **Re-position** are taken from the Instrument Settings window Scanner-tab. Check if they still apply.

Select the Stability Scan mode with the Scan Mode selector.

Be sure that the Helium and X-Rays are switched 'ON' at the scanner.

Press the Start button to start scan.



How Do I ... Reset a scanner error on the touch screen

If any serious failure in the scanner is detected like emergency stop, low air-pressure etc. the system stopped and an error symbol at the top of the touch screen will appear.

When the cause of the error has been found and eliminated the system should be re-activated again.

To recover from an emergency stop pull the red emergency stop button out and press the blue RESET EMERGENCY STOP button.



In any case press always the RESET ERROR and RESET CYCLE buttons at the touch screen. These buttons are available on the Main Menu Screen.



XRF-Core Scanner Program V.3.0

Description of default values for various hardware and non-hardware dependent parameters

August 2006 Bob Koster

- Hardware dependent parameters

These parameters are stored in the configuration file: HARDWARE.INI that should be located in the same folder as the main application (XRF.EXE).

If the configuration file can not be located and opened the main application will choose the default values shown below. The main application will not generate a new configuration file. A new configuration should be created or retrieved from the install disk by the user. Changes to the values must be made by a text editor.

Default value: Description:

[Helium]

Threshold=5.0	5.0 ml/min	Lower values mean Helium->Off
Range=1000.0	1000ml/min	Mass-flowmeter range at 10V output
Factor=1.455	1.455	Correction for N2 calibrated meter

[Tube]

MaxkV=50.0	50 kV	HV Power supply output @ 10V input
MaxmA=1.00	1.50 mA	HV Power supply output @ 10V input
MaxPower=50	50 Watt	Max. allowed tube power (air cooled)

[Scanner]

Length=160	150 cm	Max. allowed core length
------------	--------	--------------------------

[Filters]

Filter1=No Filter	-	Description of filter 1
Filter2=Al	-	Description of filter 2
Filter3=Pd-Thin	-	Description of filter 3
Filter4=Pd-Thick	-	Description of filter 4
Filter5=Cu	-	Description of filter 5

[DSA]

HighVoltage=150	150V	Detector High Voltage	
RiseTime=18.4	5.6	us	Digital filter risetime
FlatTop=0.1	0.8	us	Digital filter flattop time
Channels=2048	2048	No. of channels to read from DSA	

- User controlled parameters

The following described parameters can be accessed and changed by the user through the GUI of the main application. All parameters are automatically loaded and saved, in binary mode, to disk. These configuration files are located in the same folder as the main application (XRF.EXE).

If a configuration file is missing, a new one will be generated using default values. Changes must be made through the GUI of the main application.

Instrument Settings are stored in binary file: SETUPINSTRUMENT.CFG

	Parameter:	Default value:
- Excitation	Tube Voltage, kV	20 kV
	Tube Current, mA	0.15 mA
	Filter	1
	Count Time	15 s
	Excitation List	Empty
- Display	Offset	0 eV
	Gain	20 eV / Channel
- Scanner	Sample Offset	142 mm
	Sample Safety Margin	5 mm
	Stability Test Position	100 mm
	Stability Test Cycles	10
	Calibration Position	10 mm
	Calibration Data Directory	Application Directory
- COM Ports	Scanner Com Port	Com:1

Measurement Settings are stored in binary file: SETUPMEASUREMENTS.CFG

	Parameter:	Default value:
- Basic	Data Directory	Application Directory
	Sample Name	Default
	Sample Length	60 cm
	Step Size	10 cm
	Scan and Excitation Mode	Single-Run Manual excitation
- Special	Special Positions	0
	Skip Positions	0
	Special Areas	0
- Admin	Project Name	No Project
	Project Start Date	Current Date
	Project Total Core Length	0 m
	Project Total Samples	0
	System Start Date	Current Date
	System Total Core Length	0 m
	System Total Samples	0

Canberra DSA-1000 settings:

- GAIN in DSA Hardware (Total gain appr. 72x)
- Channels in DSA Hardware (8192)
- High Voltage in INI-file
- Rise Time in INI-file
- Flattop Time in INI-file

Getting Started manual ¹ for WinAxilBatch ²

Version 2.0 Augustus 2007 Bob Koster

Contents:

- Part 1:** Brief Introduction to WinAxilBatch
- Part 2:** Quick Start
- Part 3:** Exporting Data to Microsoft Excel
- Part 4:** Program Options
- Part 5:** WinAxil Model Files



¹ Contents of this manual is based on the Windows help files that were supplied with WinAxilBatch and was written by Canberra Eurisys Benelux

² WinAxil and WinAxilBatch are exclusively distributed and supported by Canberra Eurisys Benelux

Part 1

Brief Intoduction to WinAxilBatch

Brief Introduction:

Many times we have experimental or analytical tasks that end up in several alike X-ray spectra. In those cases, the result is many X-ray spectra taken under same experimental conditions, with same detector, having same continuum, analytical lines or elements, etc. is in this situations were a tool for massive deconvolution of X-ray spectra becomes handy and useful.

WinAxilBatch gives you the possibility to deconvolute several X-ray spectra (stored in WinAxil format) in unattended mode.

For this, WinAxilBatch needs of a reference were all parameters (e.g. on the fitting, elements to be fitted, mathematical model to be applied, etc) are stored. This is done by storing all common parameters in one file and then setting this file to be the reference for all the files to be deconvoluted. This reference file is stored and named as a Model File.

Therefore before any batch procedure can be organized and performed you must create and select a Model File for your batch run.

See more detail on how to create a Model file [here](#).

Once you have created and selected a model file WinAxilBatch program can analyze many X-ray spectra in unattended mode, report on their results into an Ascii file or even exports results to MS Excel.

Several selectable program's options make the operation of WinAxilBatch very flexible and convenient to the user.

To be able to run WinAxilBatch you MUST need a registered copy of WinAxil (ver. 4.00 and later) program.

From version 1.4 and later WinAxilBatch allows to import\analysed some other formatted files, like old Axil ascii-formatted files (SPE) and Canberra proprietary formatted files (CNF). However, to be able to import Canberra formatted files you need a registered copy of Genie-2000 Canberra's spectroscopy software in the local PC.

More detailed information on how to operate WinAxilBatch is in his entire Help file or go to [Quick Start](#).

Part 2

Quick Start

Quick Start:

With the program WinAxilBatch you can fit many similar X-ray spectra in an unattended mode of operation.

An essential step in creating a batch run is creating and selecting a [WinAxil Model File](#).

See the topics:

How To: [Create a Model File](#) and

How To: [Select a Model File](#)


When running WinaxilBatch program, [Main Window](#) controls and menu commands will help you to populate the list of "To Do" with those WinAxil-type files that you are interested in analyzing under the batch mode.

Select the Model File to be applied to those files. It is in the Model File where all fitting-related parameters (geometry, detector characteristics, elements, continuum, ROIs, etc.) are stored.

The different options under [Program's Options](#) makes the operation of the program easier, flexible and convenient to the end-user.

You can have the analysis results for each file reported into the program's [Report Window](#). The contents of that Window can be saved into a file (Ascii or Rich Text Formatted) or printed.

There is also the possibility to export each file peaks' data directly into MS Excel.

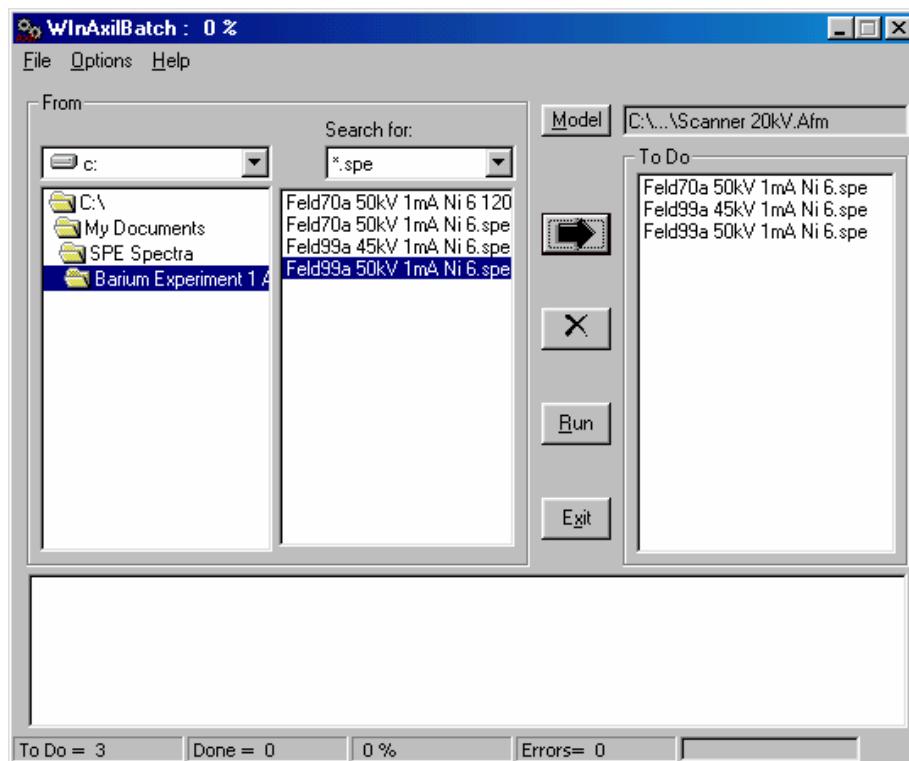

Part 3

Exporting Data to Microsoft Excel

Exporting Data to Excel:

WinAxilBatch program has been designed with the possibility to interact with Microsoft Excel software package, allowing you to export chosen peak's data directly into Excel.

The type of data that you can export to Excel can be user-defined. See more here.

The program will place the peak's data in Excel's sheet columns. While each file's data goes into a corresponding Excel's sheet row.

There is no limit to the amount of peaks and peaks' data to be exported, rather than the own limitations of Excel itself.

IMPORTANT: If no file name is specified in program's Options, then when running WinAxilBatch; it will create (if not existing) an Excel file named WINAXILBATCH.XLS located in the application subdirectory.







Before exporting to Excel you must specify in WinAxilBatch [Program's Options](#) to which file the export will be realized. File can be an existing one or a new one.

When using this option there are a few items that you should be aware of :

- 1.- WinAxilBatch does NOT check the existence in your computer of a registered copy of the program MS Excel. Therefore, any attempt to run this option in a system with no Excel on it will generate an Error.
- 2.- If the Excel file selected exists, the program will prompt you before for over-writing it. Since this prompt is generated by the server (Excel itself) a negative answer to it might result in Errors.
- 3.- Before running WinAxilBatch with the option export to Excel checked, be sure that you have NO any instance of Excel currently open. Otherwise the program might over-write your Excel data.

Part 4

Program Options

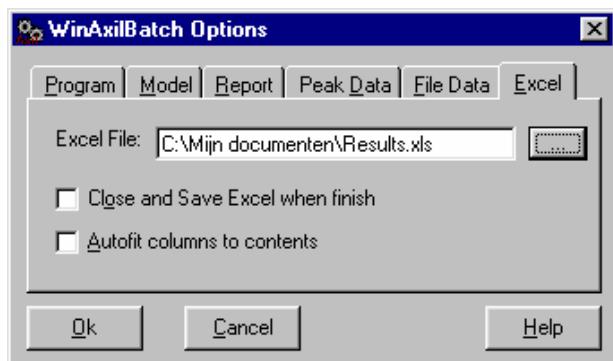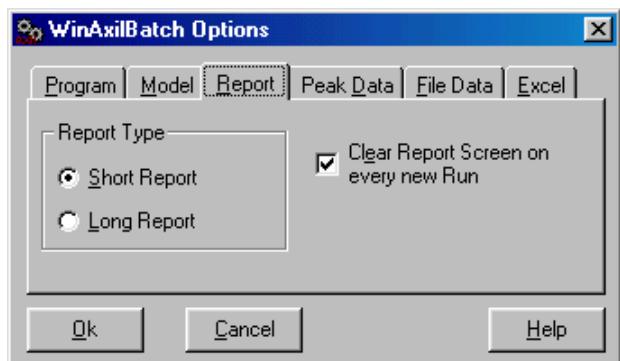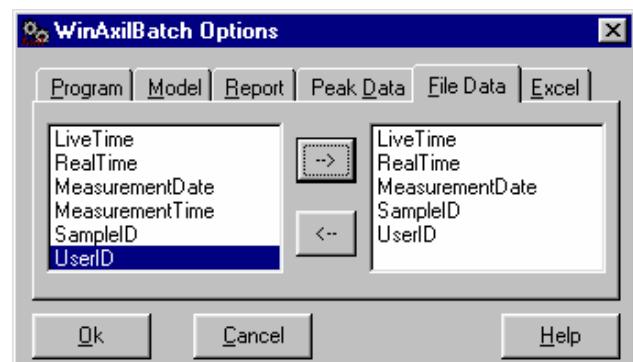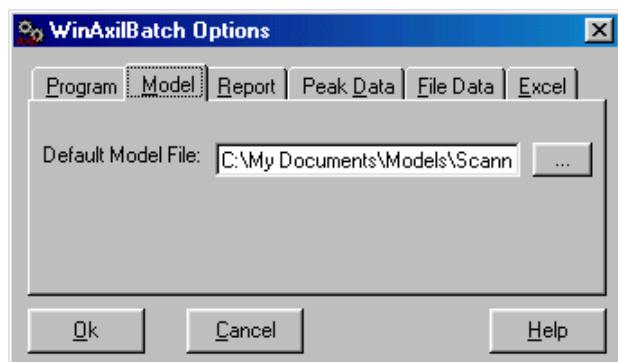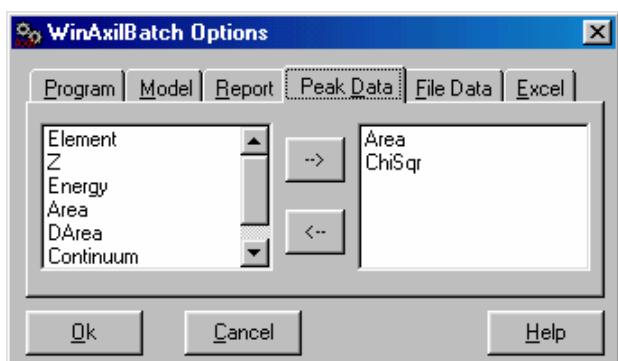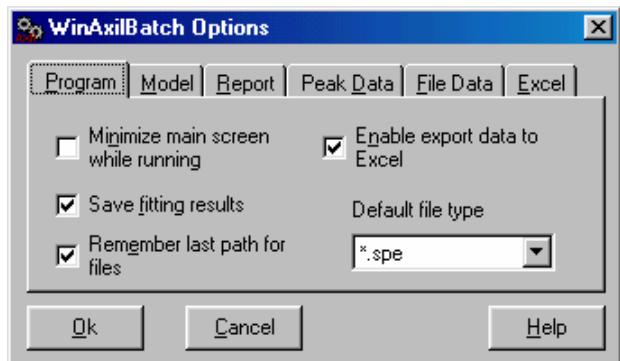

Program

Here you can chose your preferences for some parts of the operation of the program WinAxilBatch.

- Minimize main screen while running

Every time WinAxilBatch will run, its [Main Window](#) will be minimized and the program will run on the background. This mode is particularly suitable to perform other tasks or visualization without needing to wait until WinAxilBatch finishes.

When the program is chosen to run in this mode its main screen will be minimized to the Window Task Bar. You can still restore it by clicking on the corresponding Task Bar button or using Windows Task Selector (Alt+Tab).

When the program is minimized, you can inspect the percentage of the tasks done by placing the mouse over the program's button in Windows Task Bar.

- Save fitting results

By selecting this option the program will save the fitting results into each analyzed [WinAxil File](#). While not checking this option fitting results will not be saved into each file but would be reported into the [Report Window](#) or into Excel, if that option had been chosen.

- Remember last path for files

This option will cause the program to start always from the last analyzed sub-directory.

- Enable export data to Excel

This option enables/disable the possibility to export chosen peaks' data directly into MS Excel. See more on "[Exporting Data to Excel](#)".

- Default file type

Will select the default file format to appear in the file selector.

It can be chosen between:

- SPE. Ascii-formatted old AXIL files
- WAX. Binary formatted WinAxil files
- CNF. Canberra's proprietary binary format

Model

Using this option you can set the default [WinAxil Model File](#).

When this option is set, the program always loads automatically the defined WinAxil Model file at each start up.

To select the default Model File type into the corresponding text box the file name and its full path, or alternatively, select the locator command button near it. A Windows common dialog box will be prompted to help you to locate/select the corresponding file.

Please notice that only existing files and files of the type of Winaxil Model File (*.amf) can be selected.

You can still run WinAxilBatch with a different Model File from the one defined as default, by selecting it from the program's [Main Window](#).

See more on How To... ["Select a Model File"](#).

Report

Here you can select your preferences for Reporting in WinAxilBatch.

Report Type

Here you can chose between [Long-type](#) of Reports or [Short](#) ones. Selection is exclusive.

Clear Report Screen on every new Run

By checking this option the [Report Window](#) content's will be cleared every time a new batch run is started.

Although this are the default modes for the operation of the program, you can still select a different type of Report for each individual batch run.

See more on [Select type of Report](#)

Excel

In this form you can define the default parameters for the operation of the program when [Export to Excel](#) mode has been chosen.

- Excel File

Here you can define the name and location of the Excel file into where all data will be exported to.

You can just type the name and path of the Excel file or select it using the locator command button.

IMPORTANT: You can select existing or not existing filenames. If the file chosen exists then WinAxilBatch will open it with a question to overwrite it.

If the file selected does not exist, WinAxilBatch will create a new Excel file.

In any case the location of the files must be a valid one.

IMPORTANT: If no file name is specified in program's Options, then when running WinAxilBatch; it will create (if not existing) an Excel file named WINAXILBATCH.XLS located in the application subdirectory.

- Close and Save Excel file when finished

Choosing this option will result in WinAxilBatch closing and saving Excel file after the export data has been finished.

When NOT checking this option Excel instance is left open.


- Autofit columns to contents

Will adjust the Excel columns' widths to fit its contents.

See more on [Exporting Data to Excel](#) and How To ... [Export Data to Excel](#)

Peak Data

Here you can define what kind of Peak's Data to Report and export to MS Excel.

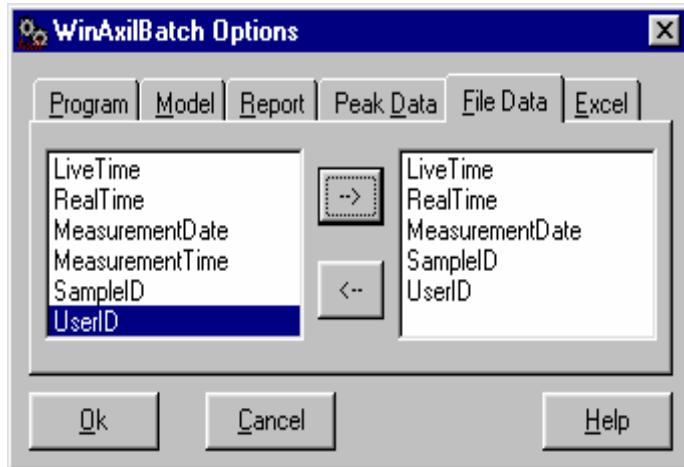

In the left list box are listed all types of data that are available in WinAxilBatch after the fitting of a spectrum is performed.

Out of this list you can select those that you would like to have in your Reports (Long-type only) or exported to Excel (if [Export To Excel](#) option has been chosen).

Populate the right list box with the items (data-type) you are interesting on.

To add/delete items to/from the right list box use the command buttons in the middle.

Once a selection has been made it is stored into the WinAxilBatch.ini file.

Whenever this "Peak Data Option" is called again, the set of previously-selected set of data will appear in the right list box for your approval or changes.

Action on the Cancel command button will discharge any changes to this set of program's option.

For exporting individual file parameters see File Data

File Data

Using the settings organized under the file data of program's Option form, the user can specify the file (measurements-related parameters to export MS Excel)

Since these parameters are single and unique per stored spectrum file, their contents will occupy a single column in the MS Excel worksheet.

The following File's Data can be extracted and exported into MS Excel.

Spectrum ID	\$SPEC_ID:
LiveTime(sec)	\$MEAS_TIM:
RealTime(sec)	\$MEAS_TIM:
MeasurementsDate	\$DATE_MEAS:
UserID	\$USER_ID:

Where in the second column the corresponding "old" Axil or SPE block-identifier is given for reference.

Populate the right list box with the items (data-type) you are interesting on.

The add / delete items to / from the right list box use the command buttons in the middle.

Once a selection has been made it is stored into the WinAxilBatch.ini file.

For exporting peaks data see topic [Peak Data](#)

Part 5

WinAxil Model Files

Select a Model File:

WinAxilBatch must have a Model File to run. The different sections stored into this WinAxil Model File is then applied to the WinAxil files by the fitting program.

To select a Model File in two ways:

- 1.- On the run.
 - From the program's Main Window. Click on the command button with the label "Model" on it.
 - After that a Windows Common Dialog Box should be prompted for you to make the corresponding file selection.
- 2.- Defining a Default Model File in Program's Options.
 - From the main menu, select "Options\Program Options".
 - Select Tab "Model". And there type the Model File path and file name, or use the file selector button to locate it.

For both cases, notice that you are able to chose ONLY WinAxil Model Files types, with file extension: *.AMF

Selecting a model file on the run (part 1 above) will supersede any default model file already defined, but it will not get stored as the default one for the next run.

Create a Model File:

WinAxilBatch program uses several parameters and spectrum-related data for the deconvolution of the X-ray spectra. All these "common data" is stored into a so called WinAxil Model File.

Only having a registered copy of WinAxil software you are able to create a Model File.

To create a WinAxil Model File, follow the following steps:


- 1.- Start WinAxil program.
- 2.- Among all similar files that you would like to include in the batch analysis, select one very typical to the others and with good spectrum statistics.

Hint: select a file very similar to all the others in its continuum, with the presence of all elements you would like to quantify, with good statistics, etc.
- 3.- Be sure that you set correctly all spectrum parameters. E.g:
 - Measurements conditions: fill in all details
 - Detector & filter: select correct detector and filter entry from the database.
 - Excitation: select correctly the type of excitation and filters used. If necessary correct the "X-ray Technique"
- 4.- Perform an accurate energy calibration.
- 5.- Select the most suitable Fitting Model: Continuum mathematical model, ROI boundaries, fitting parameters, etc.
- 6.- Inspect the spectrum and select the elements to be analyzed.

It is advisable that you chose a file (as model) having all the peaks of the elements you would like to analyze during the batch run. But in case of some of the peaks are not present, it is important that in this step you select here those elements even if they are not seen.

- 7.- Get the best quality fit on this spectrum.
- 8.- Save it.
- 9.- Save it again as a Model file. Select in WinAxil main menu the command "File\Save As" and select Model File (*.amf) file extension in the Common Dialog Box. Save it under same name or a different one (e.g. using more explicit naming conventions), selects its location.
- 10.- Be sure that you file have been correctly saved under the name and location you had selected and with extension .amf (example: c:\WinAxil\samples\nist.amf)
- 11.- After starting WinAxilBatch program select this files as the Model File and create the list of files to be analyzed during the batch run.

XRF Processing Schema

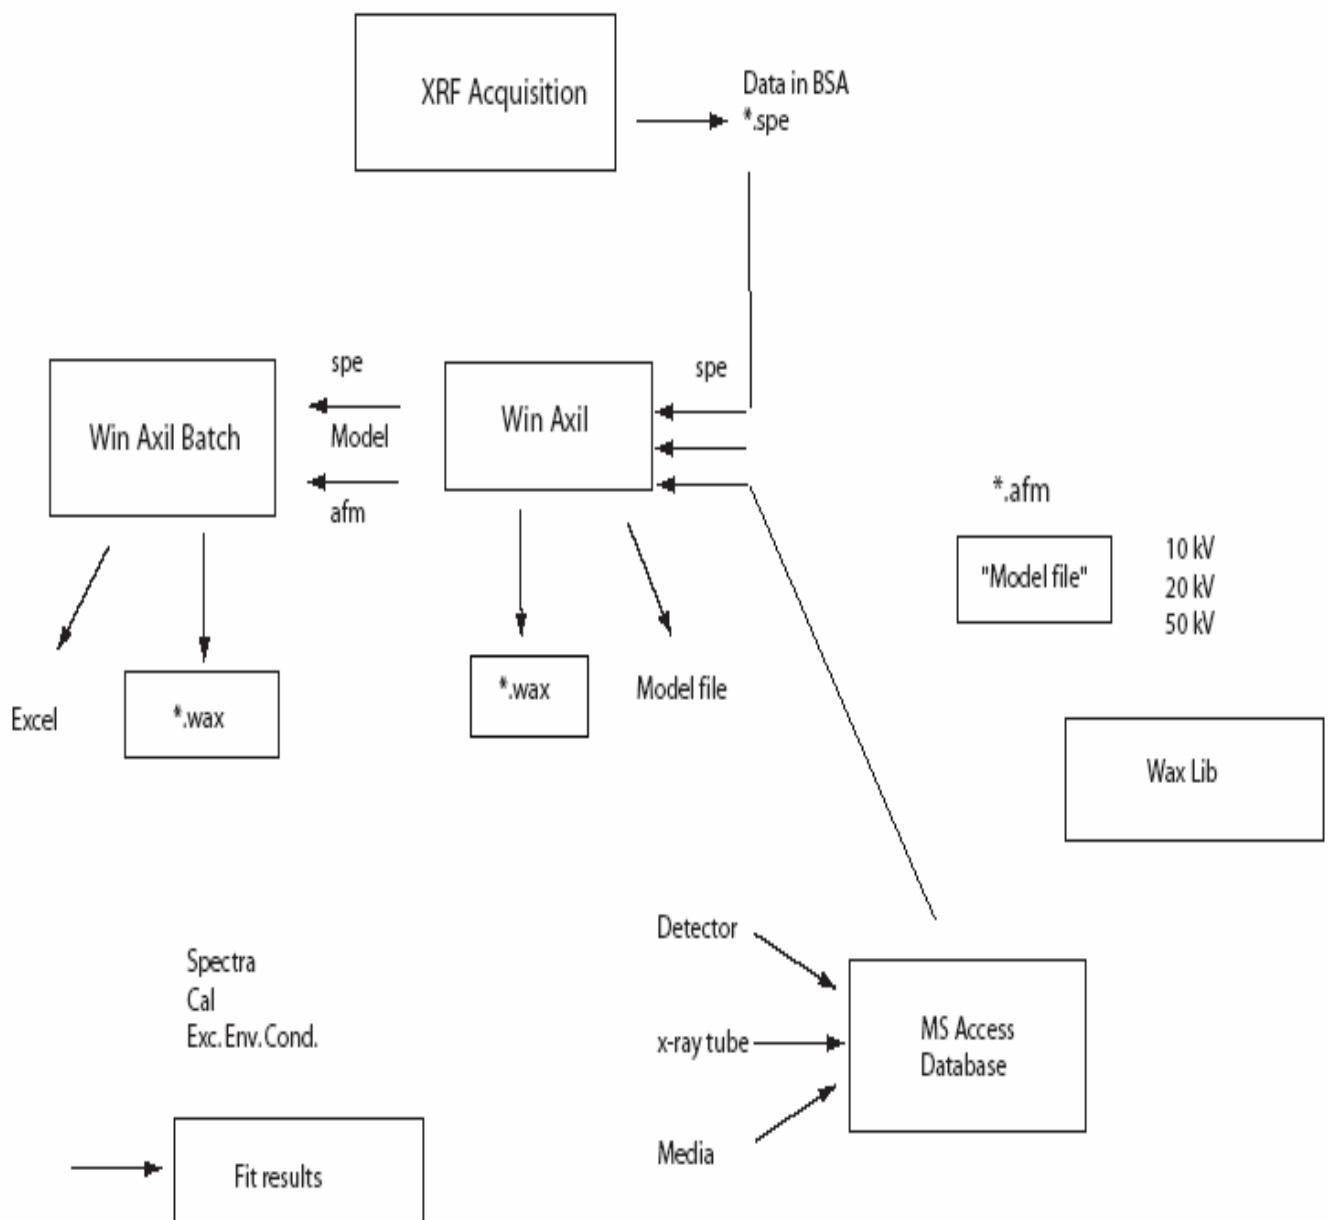

Canberra X-PIPS / DSA-1000 configuration description

Version 1.1, June 2007



© AvaaTech, Bob Koster


Step 1: Install Canberra Programming Libraries


Step 2: Create MID file using the MCA Input Definition Editor

Step 1: Install Canberra Programming Libraries

Insert the Canberra Genie-2k installation CD-ROM version 3.0B in a CD-rom drive.

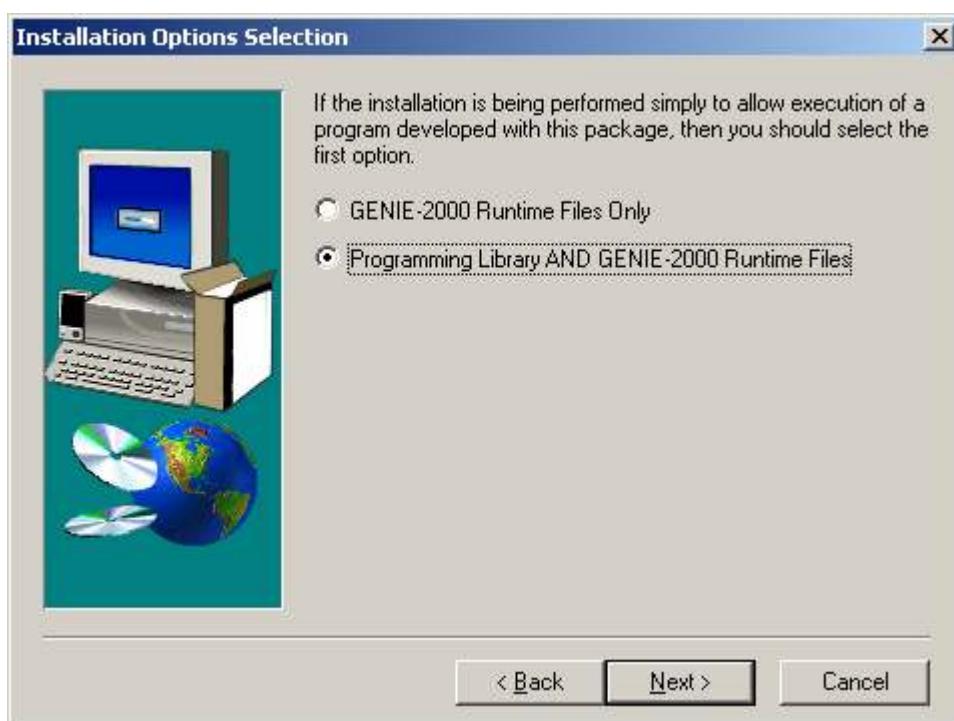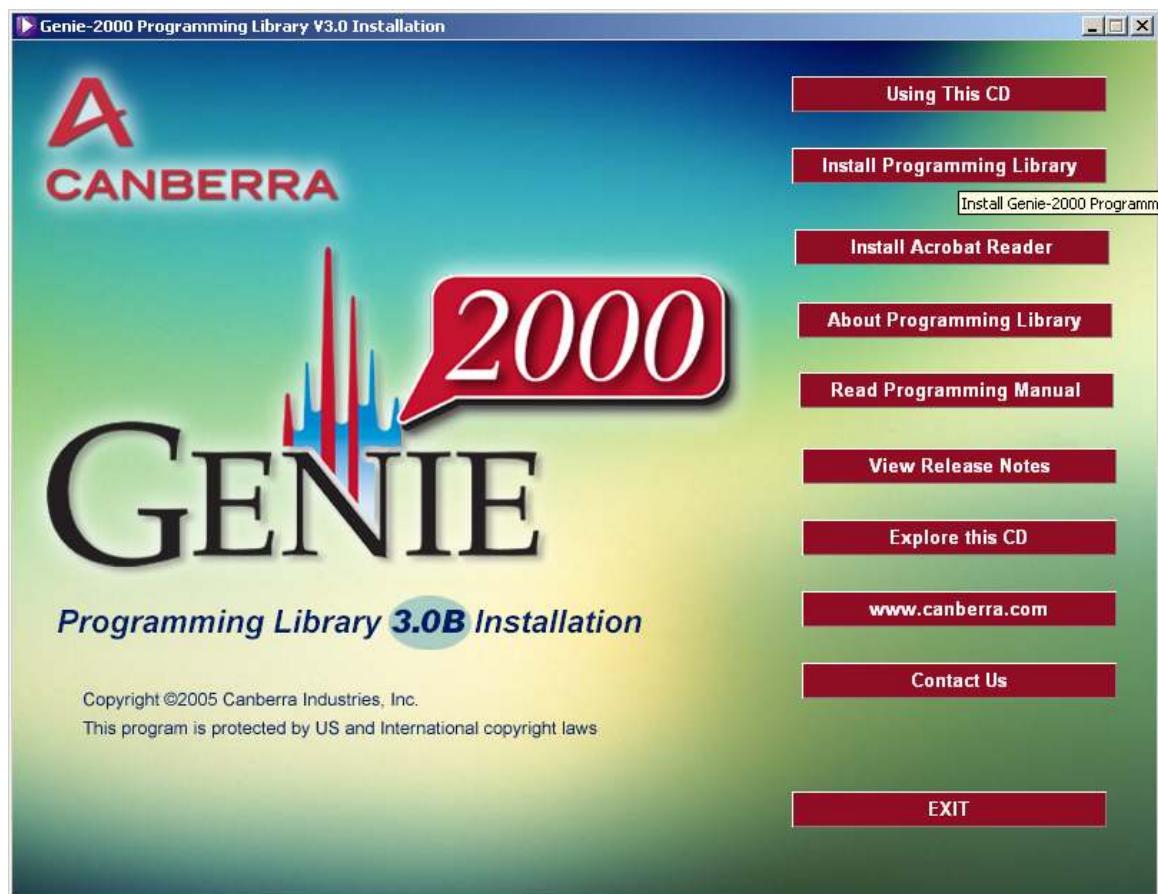


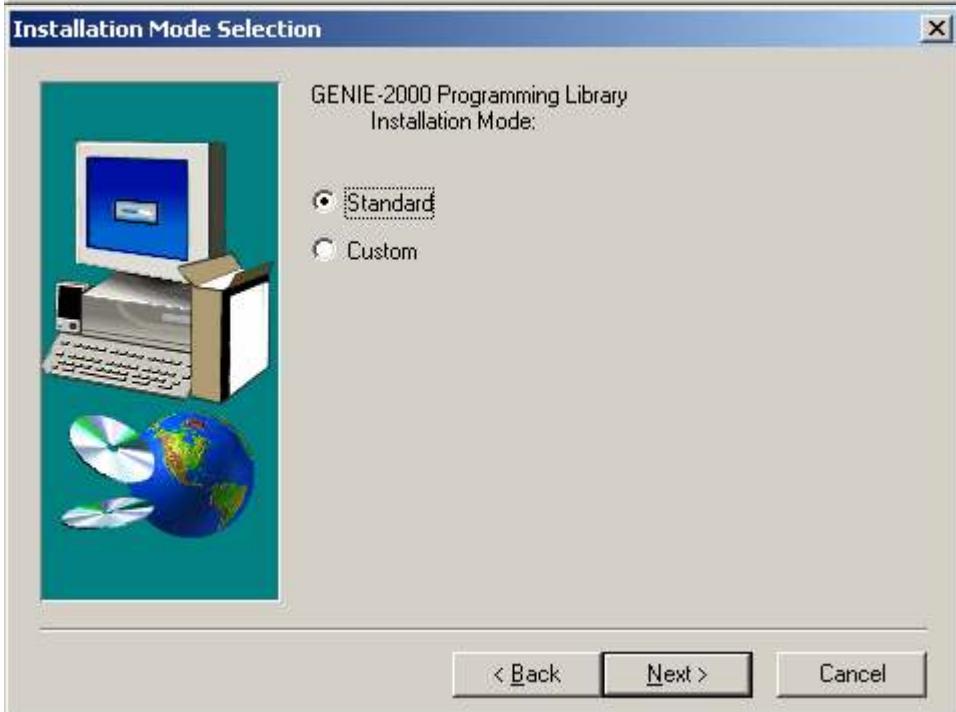


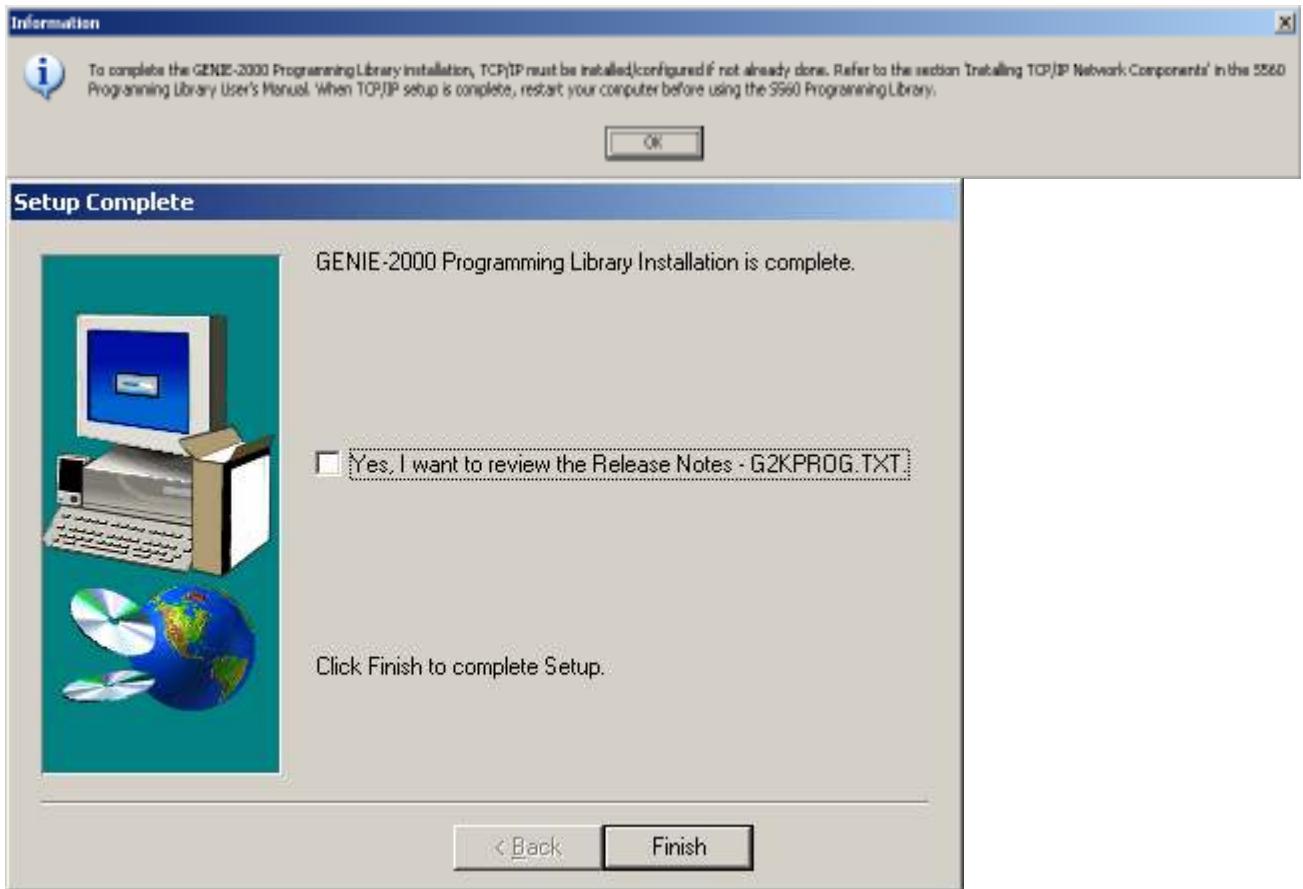


Step 2: Create MID file using the MCA Input Definition Editor


Start the MID editor via the windows start menu:

Start / Programs / Genie-2000 / MCA Input Definition Editor

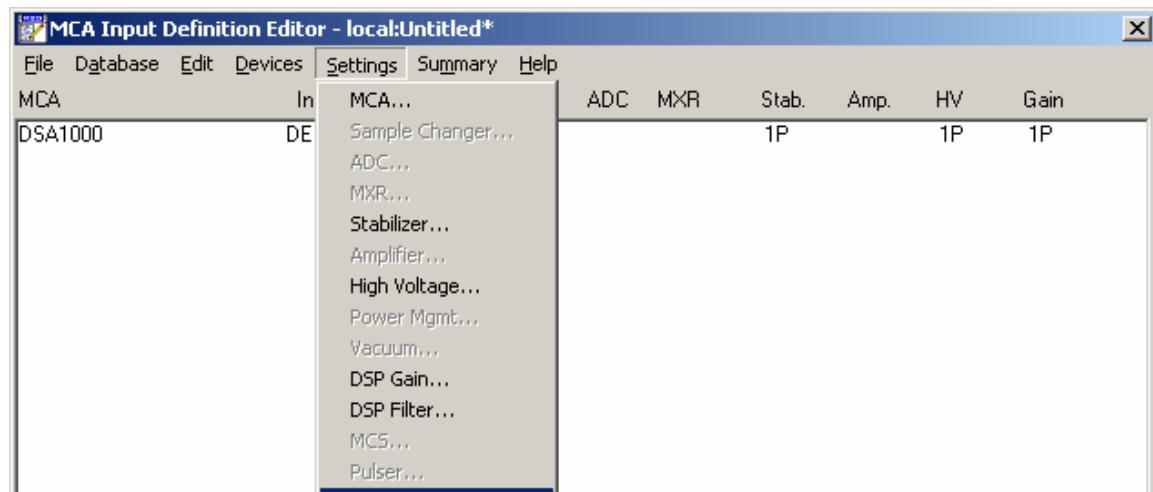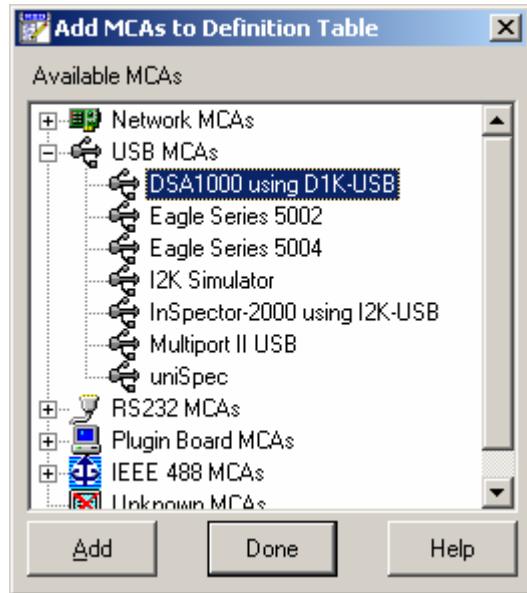


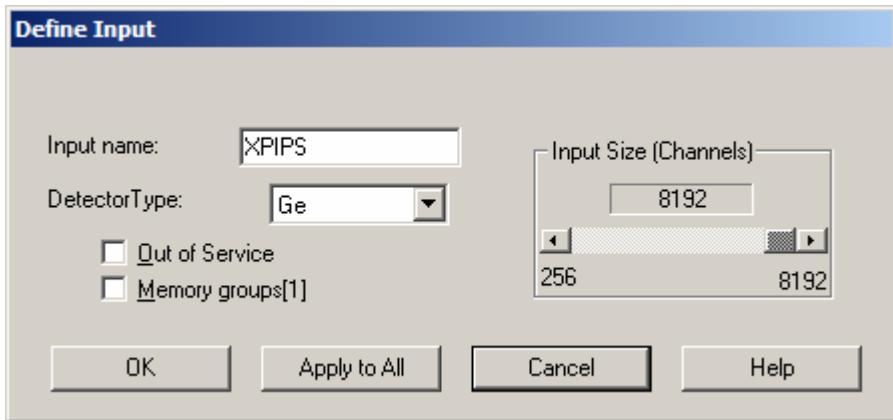

Define the Input Size always to 8192 channels.
Usually Avaatech reads the first 2048 channels, calibrated at 20eV/channel.
In the Genie-2K release a Si detector type is not yet available. Therefore choose Ge.

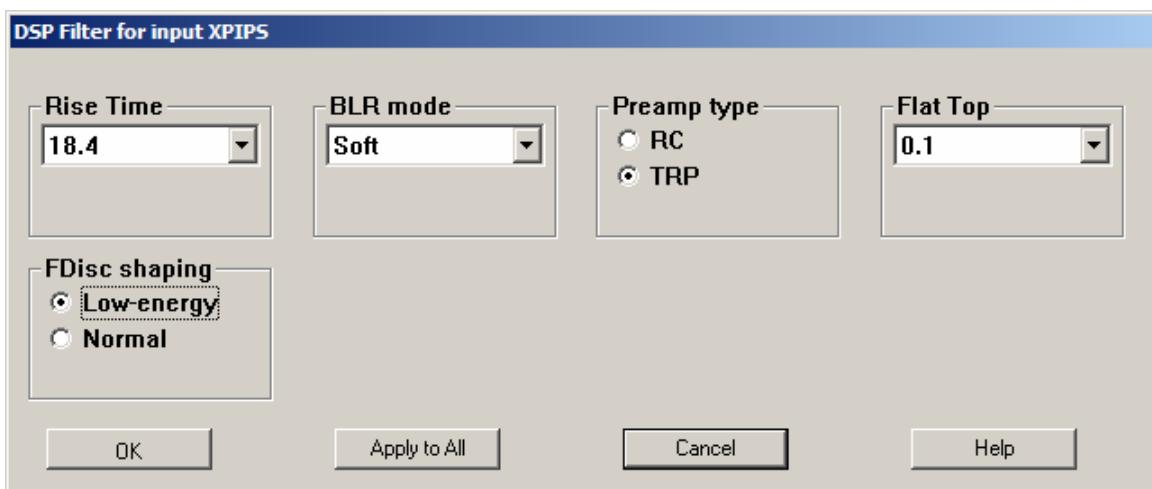

Rise Time and Flat Top time are overwritten by the XRF Core Scanner Program.

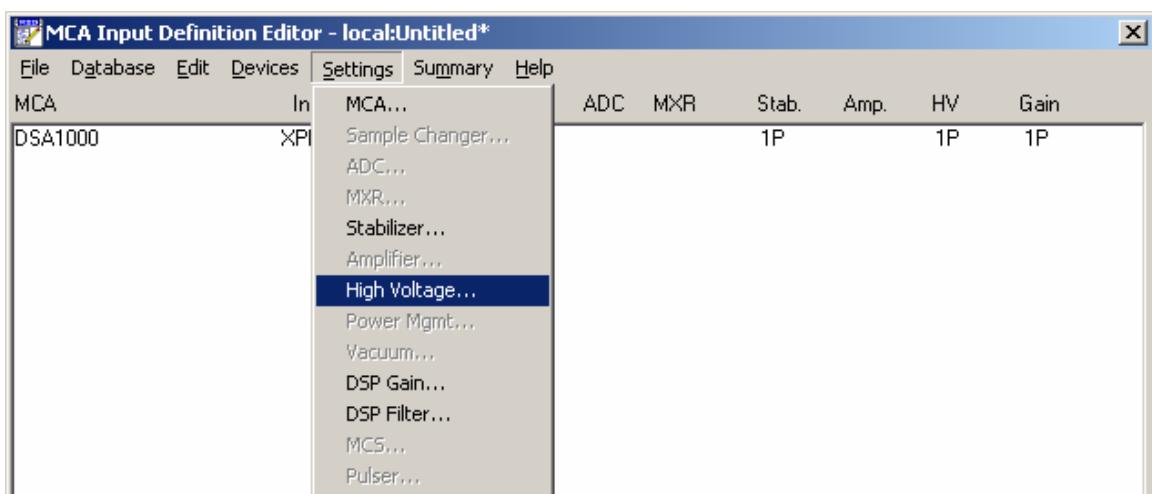

High Voltage Supply for input XPIPS

Range +1300v	Voltage limit 650.2v 0 1300	Voltage 420.0v Ok 0 650	Inh. signal Positive Negative
OK	Apply to All	Cancel	Help

Currently the 0.5mm X-PIPS Si-detectors are using internal generated Bias voltage. The 1.5mm X-PIPS Si-detectors will use external High Voltage bias signals. The polarity and range need then to be adjusted to the X-PIPS requirements.

MCA for input XPIPS


MCA Full Memory 1k 2k 4k 8k 16k 32k 64k
No. of ADCs 1 2 4 PHA MCS
Device Serial Number 07027597
OK Cancel Help

Be sure the serial number corresponds with the DSA-1000 serial number.


DSP Gain for input XPIPS

Gain Attenuator Off On	Coarse gain x40	Fine gain 1.8013x 0.900 1.900	S-fine gain 1.000002x 0.9975 1.0025
FDisc Mode Auto Manual	FDisc Setting 1.0% 0 100	Inp. Polarity Positive Negative	Inh. polarity Positive Negative
LLD Mode Auto Manual	LLD 0.1% 0 100		
OK	Apply to All	Cancel	Help

Save the current MCA setup: File / Save As File name: XPIPS

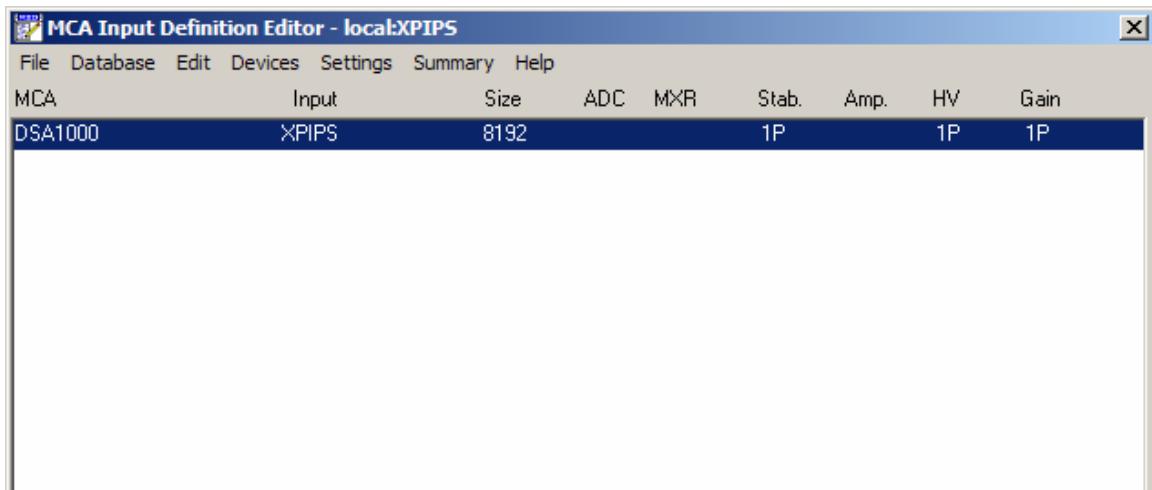

Load the new MCA setup into the database: Database / Load To ...

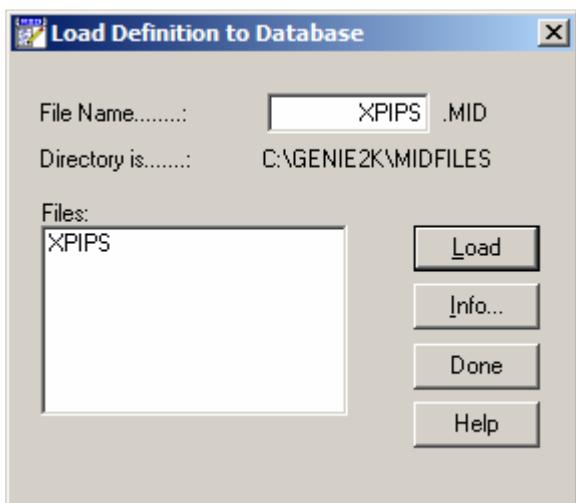

Important note:

Before an existing MCA setup can be opened for modification it is necessary to unload this setup from the database first.

After modification the new setup must be saved: File / Save
Finally the new setup must be loaded again into the database.

Different MCA setups (*.MID files) can be created and saved on disk. Only one setup can, and must, be loaded into the database !