



CTD Data RV Heincke HE596

Data Processing Report

Contents

1	Introduction	1
2	Workflow	1
3	Expedition details	3
4	Sensor Layout	3
5	Processing	3
6	Results	5

Contact:

Dr. Sandra Tippenhauer Alfred-Wegener-Institute

Klußmannstr. 3d, D-27570 Bremerhaven, GERMANY

Mail: info@awi.de

Processing Agency:

FIELAX GmbH

Schleusenstr. 14, D-27568 Bremerhaven, GERMANY

Mail: info@fielax.de

Ref.: CTD-HE596-report.pdf	Vers.: 1	Date: 2022/07/11	Status: final
----------------------------	----------	------------------	---------------



1 Introduction

This report describes the processing of CTD raw data acquired by Seabird SBE 911plus CTD on board RV Heincke during expedition HE596.

2 Workflow

The different steps of processing and validation are visualized in Figure 1. The CTD raw data are delivered from Dr. Sandra Tippenhauer (AWI). The station book of the RV Heincke cruise is extracted from the DAVIS SHIP data base (https://dship.awi.de). The first CTD station and cast is processed manually in SBE Data Processing to configure the *.psa Seabird routines Data Conversion, Wild Edit, Bottle Summary, Split, Translate, Cell Thermal Mass, Loop Edit and Bin Average. The Seabird routines are then run in a batch job CTDjob in ManageCTD to process the complete CTD data set. The downcast of each CTD station/cast is used for further processing. In CTDjob the start record and the lowest altimeter point of the downcast is selected. With the *Utilities* → *Dship Ebook* function of ManageCTD the DAVIS SHIP station book extraction is used for getting the header information of all CTD stations/casts of the cruise. ManageCTD *Utilities* \rightarrow *Find Profile* function compares station times of the header with the entries in the station book to find out the correct naming of the stations and casts. In CTDheader in ManageCTD the header information of each CTD station/cast is displayed, controlled and corrected if necessary. CTDdespike in ManageCTD is used for a visual check of the data and to erase/interpolate spikes in the data if necessary. Additionally, a sensor pair (Temp1/Sal1 or Temp2/Sal2) is chosen for each station/cast of the RV Heincke cruise in CTDdespike.

ManageCTD *Utilities* \rightarrow *CheckDoubleSensors* controls the quality of temperature and conductivity sensors. For this purpose outliers of too high sensor pair differences could be removed. The data is then converted to spreadsheet format with dsp2odv for visualization of the data in Ocean Data View (ODV). The second visual inspection of the CTD data allows a comparison with data from other CTD casts from close-by stations to verify the oxygen sensor data. Therefore, potential reference cruise data is downloaded from PANGAEA (http://www.PANGAEA.de). The reference data is converted to *.mat format. In the ManageCTD Final Processing the CTD data is displayed together with the reference data. Bad data points, sensors or casts are interpolated or erased from the data set and filters are applied if necessary. The processed CTD data are written to text files and imported to PANGAEA (http://www.PANGAEA.de) for publication.



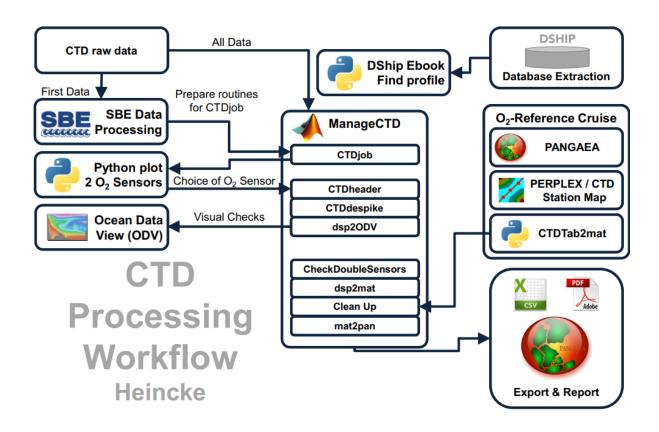


Figure 1: CTD data Processing Workflow



3 Expedition details

Expedition number

Vessel name RV Heincke

Expedition leader Brenner, Matthias

Expedition start 08.04.2022 Bremerhaven Expedition end 13.04.2022 Bremerhaven

HE596

Duration 5 days No. of CTD casts 17

BSH ID 20220156

Expedition report https://doi.pangaea.de/10.48433/cr_he596

Expedition map https://download.pangaea.de/reference/113265/attachments/HE596_nav.jpg

Event list https://www.pangaea.de/expeditions/events/HE596

4 Sensor Layout

This chapter describes the CTD sensors mounted during this cruise: SBE 911plus CTD (SN: 1015), SBE Instrument Configuration Version 7.23.0.1.

ID	Sensor Name	Serial No.	Calibration Date
55	TemperatureSensor	4918	05-Mar-21
3	ConductivitySensor	3810	09-Feb-21
45	PressureSensor	1015	26-Jan-17
55	TemperatureSensor	5110	05-Mar-21
3	ConductivitySensor	3827	02-Feb-12
0	AltimeterSensor	Valeport	None
71	WET_LabsCStar	435	None
20	FluoroWetlabECO_AFL_FL_Sensor	1365	7.1.2022

5 Processing

Details of processing procedures and processing parameters are described in *CTD Processing Log-book of RV Heincke* (hdl:10013/epic.47427).

Density Inversions and Manual Validation

Obvious outliers were removed manually. For the visual check density inversions > 0.005 kg/m^3 and > 0.01 kg/m^3 were flagged differently for display but not removed automatically. Decisions whether the flagged values were manually removed or not are based on the description in *CTD Processing Logbook of RV Heincke* (hdl:10013/epic.47427).



Sensor Differences

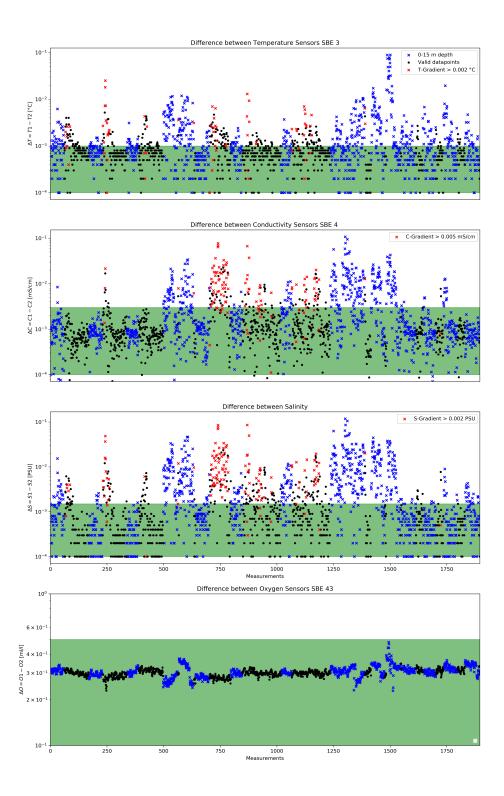


Figure 2: Data accuracy of sensor pairs HE596



6 Results

A complete processing overview for each sensor at each station is summarized in the table in the Appendix (Figure 3).

Double Sensor Check

In Figure 2, the absolute residuals between the two sensorpairs are shown for the measured parameters *Temperature* and *Conductivity* and the derived parameter *Salinity*. Measurements in shallow water depths < 15 m (blue crosses) and gradients between two datapoints exceeding a defined threshold (red crosses) were omitted for accuracy calculation.

	Accuracy	Measurements re-	Remaining measure-			
		moved	ments			
Parameter	given by manufacturer	Surface 0-15m + gradi-	within accuracy specifi-			
		ent filter	cations			
Temperature	$\pm 0.001^{\circ}C$	56.07%	78.27%			
Conductivity	$\pm 0.003mS/cm$	57.96%	91.34%			
Salinity	$\pm 0.0015 PSU$	59.12%	76.65%			

Comments

- 17 CTD "max depth/on ground" entries in DShip station book
- 17 CTD raw data sets delivered
- 2 CTD cast was made three times on a station (6-1, 15-1)
- of these 17 processed CTD casts:
 - 0 oxygen profiles deleted (spiky and not matching to reference casts)
 - 52 data points interpolated
 - 8 data points erased



Result files

Text File (HE596_phys_oce.tab):

The format is a plain text (tab-delimited values) file.

Column separator	Tabulator "\t"
Column 1	Event label
Column 2	Date/Time of event
Column 3	Latitude of event
Column 4	Longitude of event
Column 5	Elevation of event
Column 6	DEPTH, water
Column 7	Pressure, water
Column 8	Temperature, water
Column 9	Conductivity
Column 10	Salinity
Column 11	Temperature, water, potential
Column 12	Density, sigma-theta (0)
Column 13	Oxygen
Column 14	Oxygen, saturation
Column 15	Attenuation, optical beam transmission
Column 16	Fluorometer
Column 17	Number of observations

Processing Report (CTD-HE596-report.pdf):

This PDF document.



Commonte	Sollille																		
	Offset	0.3	0.2	0.2	0.4	9.0	3.8	3.8	3.8	4.8	0.2	0.2	0.2	0.4	9.0	9.0	0.5	9.0	
Oxygen reference	dist. (km)	1.1	9.0	9.0	2.4	6.5	52.5	52.6	52.6	4.0	2.3	2.3	2.2	0.3	4.8	5.5	9.5	7.5	
Oxygen	cruise/sss-cc o	HE443/82-1	HE443/78-1	HE443/78-1	HE443/06-1	HE443/38-1	HE322/379-1	HE322/379-1	HE322/379-1	HE322/375-1	HE441/15-1	HE441/15-1	HE441/15-1	HE571/3-1	HE571/2-1	HE571/2-1	HE571/2-1	HE571/1-1	
nsors	Offset c	0.31	0.29	0.31	1 72.0	0.32	0.28 F	0.30 F	0.30 F	0.31 F	0.31	0.30	0.32	0.35	0.32	0.31	0.32	0.33	
2 Oxy Sensors	Sensor	1597	1597	1597	1597	1597	1597	1597	1597	1597	1597	1597	1597	1597	1597	1597	1597	1597	
_	erased	0	0	2	0	0	0	0	0	0	0	0	0	-	0	2	0	0	∞
Complete	interp	13	7	7	0	0	2	0	10	0	0	2	0	0	0	0	0	2	52
	erased			1															1
Oxy	interp	1	1	1			-		2			-						1	8
or	erased			1										-		2			4
Fluor	interp	2	1	2			-		2			-						1	13
Frans	erased			1															1
Tra	interp	1	1	1			1		2			1						1	∞
Sal	erased			1															1
S	interp	3	2	-			-		2			-						1	11
emp	erased			-															1
	interp	3	2	2			-		2			-						1	12
Sensor	pair	1	1	-	-	-	-	-	-	-	-	-	-	-	1	-	-	1	
File Name	HE596_	Helgoland01	Helgoland02	Helgoland03	Helgoland04	Helgoland05	UC30_01	UC30_02	UC30_03	Sylt01	Ariadne01	Ariadne02	Ariadne03	Spiekeroog01	Spiekeroog02	Harle01	Harle02	Weser01	
Depth	[m]	34.2	51.2	47.9	12.7	9.3	20.7	19.8	20.0	14.2	34.4	35.2	35.1	20.1	15.4	14.4	12.1	14.2	
Position	Longitude	007° 56,852' E	007° 53,556' E	007° 53,503' E	008° 00,057' E	008° 03,491' E	007° 57,063' E	007° 57,039' E	007° 56,950' E	007° 58,253' E	007° 20,417' E	007° 20,507' E	007° 20,580' E	007° 43,812' E	007° 47,607' E	007° 49,172' E	007° 52,326' E	007° 58,482' E	
Position	Latitude	54° 09,774' N	CTD 10.04.2022 16:08 54° 07,653' N	54° 07,656' N	10.04.2022 17:16 54° 11,484' N	10.04.2022 17:58 54° 14,367' N	55° 30,666' N	11.04.2022 07:56 55° 30,701' N	CTD 11.04.2022 08:12 55° 30,714' N	55° 01,951' N	CTD 12.04.2022 05:52 54° 06,715' N	CTD 12.04.2022 06:11 54° 06,721' N 007° 20,507' E	CTD 12.04.2022 06:31 54° 06,712' N	CTD 13.04.2022 05:05 53° 52,974' N	CTD 13.04.2022 05:38 53° 51,053' N	13.04.2022 06:14 53° 49,861' N	13.04.2022 06:42 53° 50,649' N	13.04.2022 07:26 53° 52,023' N	
Į.	D		16:08		17:16	17:58		07:56	08:12	20:10	05:52	06:11	06:31	05:05	05:38	06:14	06:42	07:26	
Date.	Date	CTD 09:04.2022 06:04	0.04.2022	10.04.2022 16:26	0.04.2022	0.04.2022	11.04.2022 07:39	1.04.2022	1.04.2022	CTD 11.04.2022 20:10	2.04.2022	2.04.2022	2.04.2022	3.04.2022	3.04.2022	3.04.2022	3.04.2022	3.04.2022	
Gear	Abbr.	CTD 08	CTD 1	CTD 10	CTD 10	CTD 10	CTD 1	CTD 1	CTD 1	CTD 1	CTD 1.	CTD 1.	CTD 1.	CTD 1.	CTD 1.	CTD 13	CTD 13	CTD 13	
Station	HE596_	1-1	2-1	2-2	3-1	1-4	6-1-1	6-1-2	6-1-3	13-1	15-1-1	15-1-2	15-1-3	23-1	24-1	25-1	26-1	27-1	

Figure 3: CTD data Processing Summary HE596 Page 7 of 8



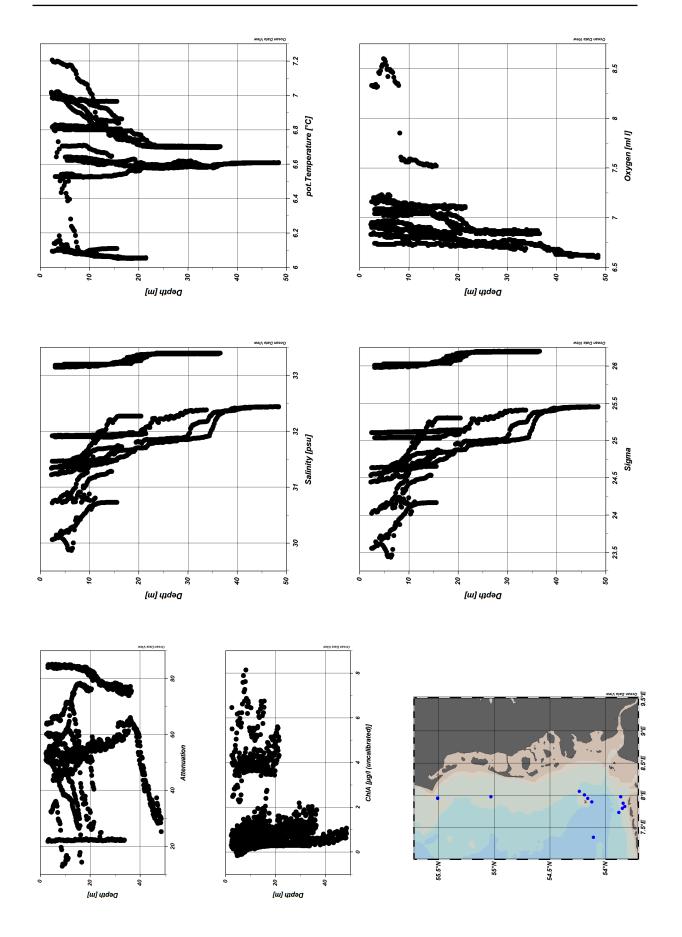


Figure 4: ODV Screenshot of HE596 CTD data Page 8 of 8